

SMS Programming GS2060/TL260GS for PowerSeries

This is NOT a replacement for the Installation manual – it is simply a “Help Note”

You should read the Manual and have an understanding of Network terminology before attempting any installation

Things you need before you start:

- You will need a Laptop or PC loaded with DLS 5 **OR** be using a PK5500 Full English LCD keypad
- Your panel must be a DSC PC1616/1832/1864 v4.1 or higher (v4.1 or higher)
- The Panel's Installer Code (default: 5555) Installer Code: _ _ _ _
- SIM Card – Vodafone or 2 Degrees (Telecom SIM cards are **NOT** compatible)

Important: SIM card MUST be initialised first AND must be inserted BEFORE GS2060/TL260GS module is powered!

Panel Programming:

Enter Programming [*][8] then [Installer Code: _ _ _ _]

Enter Section -> [301], enter 'DCAA' – this will route to the GPRS module *

[380], ensure option '1' is ON – enables panel communication

[382], ensure option '5' is ON – enables the GPRS/Ethernet Module

Note: If no phone line is connected, disable TLM in location [015] option [7].

****Note: [301]-[303], The Leading 'D' in 'DCAA' is entered by default - do NOT delete it.***

GS2060/TL260GS Programming:

Enter Programming [*][8] then [Installer Code: _ _ _ _]

Enter [851] to enter GPRS Programming

[006], ensure option '4' is ON – this enables GPRS Receiver 1

[203], enter loopback IP address 127.000.000.002

[311]-[318], enter SMS mobile numbers **

[321]-[328], set SMS event message toggles as required ***

(please refer to your GS2060/TL260GS programming worksheet).

Enter [999], then [55] to restart GPRS module for changes to take effect

Note: A valid GPRS communications path is required for SMS to work correctly.

Note: For all Area, Zone & User Label programming please refer to your GS2060/TL260GS programming worksheet.

*****Note: SMS mobile numbers MUST begin with 'E64' and drop the initial '0' of the mobile number. E.g. Mobile number 021123456 will be entered as E6421123456.***

******Note: SMS event message toggles, option '7' MUST be ON as this enables you to receive SMS. Option '1' enables you to receive Alarm/Restore Notification SMS which you should also be enabling.***