

ALTRON HARRIER

Arming & Disarming

1. How To Disarm

- Press the [SET] button on the pendant, or enter a valid master or user code at the keypad.
- The keypad will give 3 short beeps and the *SET* light will go out.

2. How To Arm

- Close all protected doors and windows, and stop movement in the areas covered by motion detectors.
- All the zone lights should be off.
- Press the [SET] button on the pendant or from the keypad enter a user code followed by [1]
- The *FULL SET* light will come on, the keypad will start beeping and the exit delay will start.
- Leave the protected area.
- An alternative quick-arm method is to press [1] [#] to fully arm the system.

3. What To Do If Code Does Not Work

- Re-enter a valid master or user code after the keypad has sounded a series of 8 quick beeps.

4. How To Part Arm

- Close all protected doors and windows, and stop movement in the areas covered by motion detectors.
- All the zone lights for the zones to be armed, should be off.
- Press the [PART SET] button on the pendant, or from the keypad enter a user code followed by [2].
- The keypad will give 3 quick beeps and the *PART SET* light will come on and the keypad will beep for the exit delay time.
- An alternative quick-arm method is to press [2] [#] to part arm the system.

5. How To Fully Arm

- Enter a valid code to exit 'PART SET' mode.
- Now enter [1] + [#].
- The *SET* light will come on.

Keypad Functions

6. How To View Memory

- Enter [Master Code] [8] (Review).
- The *SET*, *PART SET*, and *PROGRAM* lights will come on.
- Press [1] for last activation, then [2] for the next and so on up to [8].
- The corresponding zone LED's show which zones went into alarm..

7. How To Exit Memory

- Press the [#] key to exit.

8. How To Bypass Zones

- Enter [Master Code] [6] (Isolate).
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- Enter the zones to be bypassed. The corresponding zone lights will turn on.
- Press [#].

9. How To Clear Bypasses

- Enter [Master Code] [6] (Isolate).
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- The zone lights that are on indicate the zones that have been bypassed. Enter the zone number again to clear the bypass.
- Press [#].
- Note that when the panel is un-set, all zone bypasses will be cleared.

10. How To View Trouble

- Lights on the keypad indicate any trouble conditions.

AC	Normally on to show that mains power is being supplied.
24Hr Tamper	Normally off to show the tamper circuit is closed.
Low Battery	Normally off to show that the battery is charged.
- There is also a Fail To Communicate terminal on the PCB which goes high after the specified number of call attempts has been made.

11. How To Clear Trouble

- Each of the problems should be rectified.

12. How To Recognise That The Chime Function Is On

- The keypad will sound a beep whenever a chime zone is tripped. Each zone has 30 second timeout before it can sound the keypad again.

13. How To Turn On Chime

- Enter [Master Code] [9].
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- Select the zones to have chime attribute. The corresponding zone LED's will light.
- Press [#] to exit.

14. How To Turn Off Chime

- Enter [Master Code] [9].
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- The zone LED's that are lit have the chime attribute set. Enter the zone number to deselect.
- Press [#] to exit.

15. How To Send Keypad Panic Alarm

- Press [*] + [#] together.
- The communication settings must be programmed under menu option [*].

16. How To Reset Smoke Detectors

- The Harrier IV has some additional output terminals that could be configured to reset smoke detectors. Press the corresponding button on the remote pendant.

User Codes

17. How To Add User Codes

- Enter [Master Code] [5].
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- Press 2-5 for user slot, light will illuminate.
- Enter the new code and press [#].
- **Note a code cannot be the same as the master code or else the master code functions will not work.**

18. How To Delete User Codes

- Single user codes cannot be deleted. See 25. How To Default Panel.

19. How To Overwrite User Codes

- Enter [Master Code] [5].
- The *SET*, *PART SET*, *PROGRAM* lights will come on.
- Press user slot to overwrite (2-5).
- Enter the new code over the top of the old one and press [#].