

CHeKT Signal ID Codes

| Signal ID                                                                                                | Event Type                             | Zone Info                                        | Instructions For Sending                                                                                                                                                         | Bridge State     |
|----------------------------------------------------------------------------------------------------------|----------------------------------------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Alarm Codes Sent on DI Trigger. (Integrator can select all available codes from the Contact ID Library.) |                                        |                                                  |                                                                                                                                                                                  |                  |
| E130/Zone                                                                                                | Instant                                | Zone will be from the Channel Information        | This should send immediately upon any zone change that is set up as "Instant"                                                                                                    | Only when armed  |
| E132/Zone                                                                                                | Follower                               | Zone will be from the Channel Information        | Sends immediately If a zone setup as "Delay" has not been triggered. If the delay zone is triggered, arming input not removed before time runs out, send this to Central Station | Only when armed  |
| E133/Zone                                                                                                | 24 Hour Alarm                          | Zone will be from the Channel Information        | This should send immediately upon being tripped, regardless of the arming state of the bridge.                                                                                   | Armed & Disarmed |
| E134/Zone                                                                                                | Entry/Exit Burglary                    | Zone will be from the Channel Information        | Send when a Delay Zone is triggered while arming input active. If the countdown expires before the arming input is deactivated, send this alarm.                                 | Only when armed  |
| Contact ID Codes sent from the CHeKT Portal. (These codes can be enabled or disabled base                |                                        |                                                  |                                                                                                                                                                                  |                  |
| E303/9XX                                                                                                 | Bridge Trouble Condition               | Zone will be Bridge Device ID                    | Sent when there is a bridge trouble condition not defined by other contact ID codes                                                                                              | Armed & Disarmed |
| E306/9XX                                                                                                 | Programming Change                     | Bridge Device ID or Camera Zone Number           | Sent when any settings or programming on a bridge has changed. Including replacing a bridge.                                                                                     | Armed & Disarmed |
| E401/9XX                                                                                                 | Opening                                | Zone will be Bridge Device ID                    | Sent immediately upon disarming of the Bridge. The Bridge was disarmed remotely, from the CHeKT mobile app or dealer portal.                                                     | Armed & Disarmed |
| R401/9XX                                                                                                 | Closing                                | Zone will be Bridge Device ID                    | Sent immediately upon arming of the Bridge. The Bridge was armed remotely, from the CHeKT mobile app or dealer portal.                                                           | Armed & Disarmed |
| E407/9XX                                                                                                 | Remote Disarm                          | Zone will be Bridge Device ID                    | Sent immediately upon disarming of the Bridge .                                                                                                                                  | Armed & Disarmed |
| R407/9XX                                                                                                 | Remote Arming                          | Zone will be Bridge Device ID                    | Sent immediately upon arming of the Bridge.                                                                                                                                      | Armed & Disarmed |
| E414/9XX                                                                                                 | Bridge Remote Restart                  | Zone will be Bridge Device ID                    | Reboot Initiated from Dealer Portal.                                                                                                                                             | Armed & Disarmed |
| E602/9XX                                                                                                 | Periodic Test                          | Zone will be Bridge Device ID                    | This should send once every 24 hours. / Dealer option down to every 4 hours.                                                                                                     | Armed & Disarmed |
| E606/900                                                                                                 | Listen in on Audio                     | Zone will be 900                                 | Sent any time the audio is accessed                                                                                                                                              | Armed & Disarmed |
| E609/900                                                                                                 | CHeKT Monitoring Portal Opened         | Zone will be 900                                 | Operator, Technician or dealer user is live viewing camera in the monitoring portal.                                                                                             | Armed & Disarmed |
|                                                                                                          |                                        |                                                  |                                                                                                                                                                                  |                  |
| E750/9XX                                                                                                 | Bridge Not Connected to Portal         | Zone will be Bridge Device ID                    | Sent when Bridge is disconnected from the portal, typically an internet issue. (10 Minute delay)                                                                                 | Armed & Disarmed |
| P750/9XX                                                                                                 | Bridge Still Disconnected from Portal  | Zone will be Bridge Device ID                    | Sent every 24 hours when Bridge is disconnected from the portal. *Time frame is customizable by each dealer.                                                                     | Armed & Disarmed |
| R750/9XX                                                                                                 | Bridge Reconnected to Portal           | Zone will be Bridge Device ID                    | Sent when Bridge is reconnects to the portal.                                                                                                                                    | Armed & Disarmed |
| E751/9XX                                                                                                 | Bridge Power On                        | Zone will be Bridge Device ID                    | Sent when Bridge is powered on and Connects to the CHeKT Portal.                                                                                                                 | Armed & Disarmed |
| E752/XXX                                                                                                 | Automated Verification Text Sent       | Zone will be from the Channel Information        | Sent when the monitoring portal automatically sends the user verification text                                                                                                   | Armed & Disarmed |
| E753/XXX                                                                                                 | No Response on Verification Text       | Zone will be from the Channel Information        | Sent when there is no end-user response to the user verification text within the time out.                                                                                       | Armed & Disarmed |
| E754/XXX                                                                                                 | Operator Sent Verification Text        | Zone will be from the Channel Information        | Sent when an operator sends the user verification text                                                                                                                           | Armed & Disarmed |
| E755/USER SLOT#                                                                                          | End User Checked Verification Text     | Zone will be 900                                 | Sent when the end user views the URL from a verification text. It is sent every time the user checks and the user slot number is also sent.                                      | Armed & Disarmed |
| E756/USER SLOT#                                                                                          | Verification Disregard from App        | Zone will be 900                                 | Sent when an end user selected disregard from the mobile app. Sent with user slot number.                                                                                        | Armed & Disarmed |
| E757/USER SLOT#                                                                                          | Verification Request Dispatch from App | Zone will be 900                                 | Sent when an end user requests dispatch from the app. Sent with slot number.                                                                                                     | Armed & Disarmed |
| E758/Zone                                                                                                | Privacy mode access granted            | Zone will be from the Channel Information        | Sent when the end user grants access to a camera in privacy mode.                                                                                                                | Armed & Disarmed |
| R758/Zone                                                                                                | Privacy mode restored                  | Zone will be from the Channel Information        | Sent when the privacy mode is restored.                                                                                                                                          | Armed & Disarmed |
| E759/900                                                                                                 | Event Link Shared                      | Zone will be 900                                 | Sent any time the a link is shared from the monitoring portal.                                                                                                                   | Armed & Disarmed |
| E760/Zone                                                                                                | Video Event Clip Viewed                | Zone will be from the Camera Channel Information | Sent when an operator has viewed a stored video clip.                                                                                                                            | Armed & Disarmed |
| E761/Zone                                                                                                | Camera Video Viewed                    | Zone will be from the Camera Channel Information | Sent when an operator has initiated live view of a camera.                                                                                                                       | Armed & Disarmed |
| E762/Zone                                                                                                | Playback Video Viewed                  | Zone will be from the Camera Channel Information | Sent when an operator has viewed playback event from a camera.                                                                                                                   | Armed & Disarmed |
| E763/Zone                                                                                                | Time-lapse Video Viewed                | Zone will be from the Camera Channel Information | Sent when an operator has viewed a Time-lapse of a camera.                                                                                                                       | Armed & Disarmed |
| E769/Zone                                                                                                | Monitoring Portal Still Open           | Zone will be from the Camera Channel Information | In XML Description include the site information. Sent ever 60 seconds while the monitoring portal is open.                                                                       | Armed & Disarmed |
| E770/9XXX                                                                                                | Privacy Mode Removed by End User       | Zone will be Camera Channel ID. Example 901A     | Sent when an end user disables the privacy mode of a camera. Sent with the Channel ID and user slot number.                                                                      | Armed & Disarmed |
| R770/9XXX                                                                                                | Privacy Mode Enabled by End User       | Zone will be Camera Channel ID. Example 901A     | Sent when an end user enables the privacy mode of a camera. Sent with the Channel ID and user slot number.                                                                       | Armed & Disarmed |
| E776/900                                                                                                 | Text to Speech Audio                   | Zone will be 900 "Cloud Portal"                  | Sent when the operator uses the Text to Speech audio function                                                                                                                    | Armed & Disarmed |
| E780/Zone                                                                                                | Camera Service Requested               | Zone will be from the Camera Channel Information | Sent when the operator marks a camera as needing service.                                                                                                                        | Armed & Disarmed |
| E790/9XX                                                                                                 | Bridge Added                           | Zone will be Bridge Device ID                    | A bridge has been added to the dealer account                                                                                                                                    | Armed & Disarmed |
| E791/9XX                                                                                                 | Bridge Removed                         | Zone will be Bridge Device ID                    | A bridge has been removed from the dealer account                                                                                                                                | Armed & Disarmed |
| E796/Zone                                                                                                | Loss Of Camera Stream                  | Zone will be from the Channel Information        | Sent after camera stream has disconnected and not re-established. (10 Minute delay.)                                                                                             | Armed & Disarmed |
| P796/Zone                                                                                                | Camera Stream Still Disconnected       | Zone will be from the Channel Information        | Sent ever 24 hours if a camera stream is disconnected. *Time frame is customizable by each dealer.                                                                               | Armed & Disarmed |
| R796/Zone                                                                                                | Camera Stream Restored                 | Zone will be from the Channel Information        | This should send after camera stream has reconnected                                                                                                                             | Armed & Disarmed |
| E799/900                                                                                                 | CHeKT TS Live view of cameras          | Zone will be 900                                 | Live View of Camera by CHeKT Support Technician                                                                                                                                  | Armed & Disarmed |
| * Pending Implementation                                                                                 |                                        |                                                  | Zone 900 = CHeKT Web Portal (Any signal that represents the portal)                                                                                                              |                  |
| As of 2/3/2020                                                                                           |                                        |                                                  | Zone 9XX = Bridge Device ID Zone Specific Signals (Opening/Closing/Not Connected/Reconnected/Bridge Error)                                                                       |                  |
|                                                                                                          |                                        | Still Testing                                    |                                                                                                                                                                                  |                  |
|                                                                                                          |                                        | No longer using.                                 |                                                                                                                                                                                  |                  |