

CONCEPT 2000

display area

A	D	G	J	M	P	S	V	Y	
B	E	H	K	N	Q	T	W	Z	
C	F	I	L	O	R	U	X		
1	2	3	4	5	6	7	8	9	0
ON	OFF	OK	END	HELP	MENU				
	↑	↓	←	⇒					

Displays Display area shows messages. To scroll use ↑ ↓ . To scroll letter by letter use ⇒ To scroll again use ⇐

Tones Long beep Wrong procedure or keystroke

Restart If wrong keystroke press **END** and restart. Use **HELP** to display next step. If no display there is no help listed. To exit press any any key.

DISARM [code] **OK** (displays name and the area(s) authorised to disarm and ON/OFF status for the area(s)
Then press **OFF** to disarm that area. If more than one scroll and press **OFF** for each area.

Reste Smoke Disarm that area if partitioned and then arm again.

ARM [code] **OK** (displays name and the area(s) authorised to arm and ON/OFF status for the area(s)
Then press **ON** to arm that area. If more than one scroll and press **ON** for each area.
If a zone is in alarm it will display. Secure that zone and continue OR if it will take a while press **END** to abort the Arming OR isolate by pressing **OK** and continue.

Isolate Arm system as normal . Then press **OK** if a zone is unsealed and is to be isolated. Clears on disarm.