

DL100 ADDENDUM

LOCATION 131: INSTANT MODE / PARTIAL ARM (ENTRY GUARD) ENABLE

Location 131 is used to enable automatic "Instant Arming" or "Partial Arm" (entry guard). Programming a "1" in this location will cause the control to automatically enter the "Instant" mode and bypass interior follower zones if a fault is not detected on an entry/exit zone during the exit delay. Programming a "3" in this location (Automatic Bypass), will cause the interior follower zones to become bypassed if a fault is not detected on an entry/exit zone, yet will not change the status of the entry/exit zone. Programming a "4" in this location will enable the Partial arm (entry guard) feature and an "8" will enable the Partial arm (entry guard) security feature. If this location contains a "0", these features are disabled.

VALUE	CHARACTERISTIC
1	ENABLE AUTO "INSTANT MODE"
2	ENABLE AUTO "INSTANT MODE" WITH ENTRY ZONE DELAY.
4	ENABLE "PARTIAL MODE" (ENTRY GUARD) DIGIT "2" TO ARM
8	ENABLE "PARTIAL MODE" (ENTRY GUARD) SECURITY FEATURE

LOCATIONS 244-249: ASSIGNING PARTIAL ARM / GROUP ISOLATE FOR ZONES 1-8

Locations 244-249 are used to assign Partial arm and Group isolate zone characteristics for zones 1 through 6. Location 244 is for zone 1 and location 249 is for zone 6. Each zone can have any or all of the following characteristics regardless of the zone type selected in locations 159-166 excluding Fire zones, which cannot have Isolate Capability enabled. Factory default is "8" for each of these locations.

Partial Arm (Entry Guard)

This unique home level arming allows you to remain inside your home and only arm areas that are not occupied. To enable Partial mode (Entry Guard) location 131 must be correctly programmed, when Partial Arm (Entry Guard) is enabled, zones Programmed with a "2" will be monitored in Partial Arm (Entry Guard). For zones to be isolated in Partial Arm (Entry Guard) do not program a "2" in this location. Pressing a two "2" at the code pad a waiting five (5) seconds will arm the DL100 in Partial Arm (Entry Guard), the disarming method will be determined in location 131.

Group Isolate

Zones can be programmed to isolate as a group when the [*9*] buttons are pressed during the exit delay. This feature can be enabled in conjunction with the Partial mode feature. Programming a "4" in these locations will enable the selected zone to be part of the group isolate.

VALUE	CHARACTERISTIC
2	PARTIAL MODE (ENTRY GUARD) (Monitored)
4	GROUP ISOLATE ZONE
6	PARTIAL MODE (ENTRY GUARD) (Monitored) GROUP ISOLATE ZONE

CHIME ENABLE DIGIT:

The chime digit on the DL100 is always digit "1" this is automatically enabled when chime zones are selected in locations 186-191.

PARTIAL ARM DIGIT:

The partial arm digit on the DL100 is always digit "2" this is automatically enabled when partial mode is selected in locations 131.

QUICK ARM DIGIT:

The quick arm digit on the DL100 is always digit "3" this is automatically enabled when any value other than "0" is entered in location 139.