


ALARM WIRING DIAGRAM:

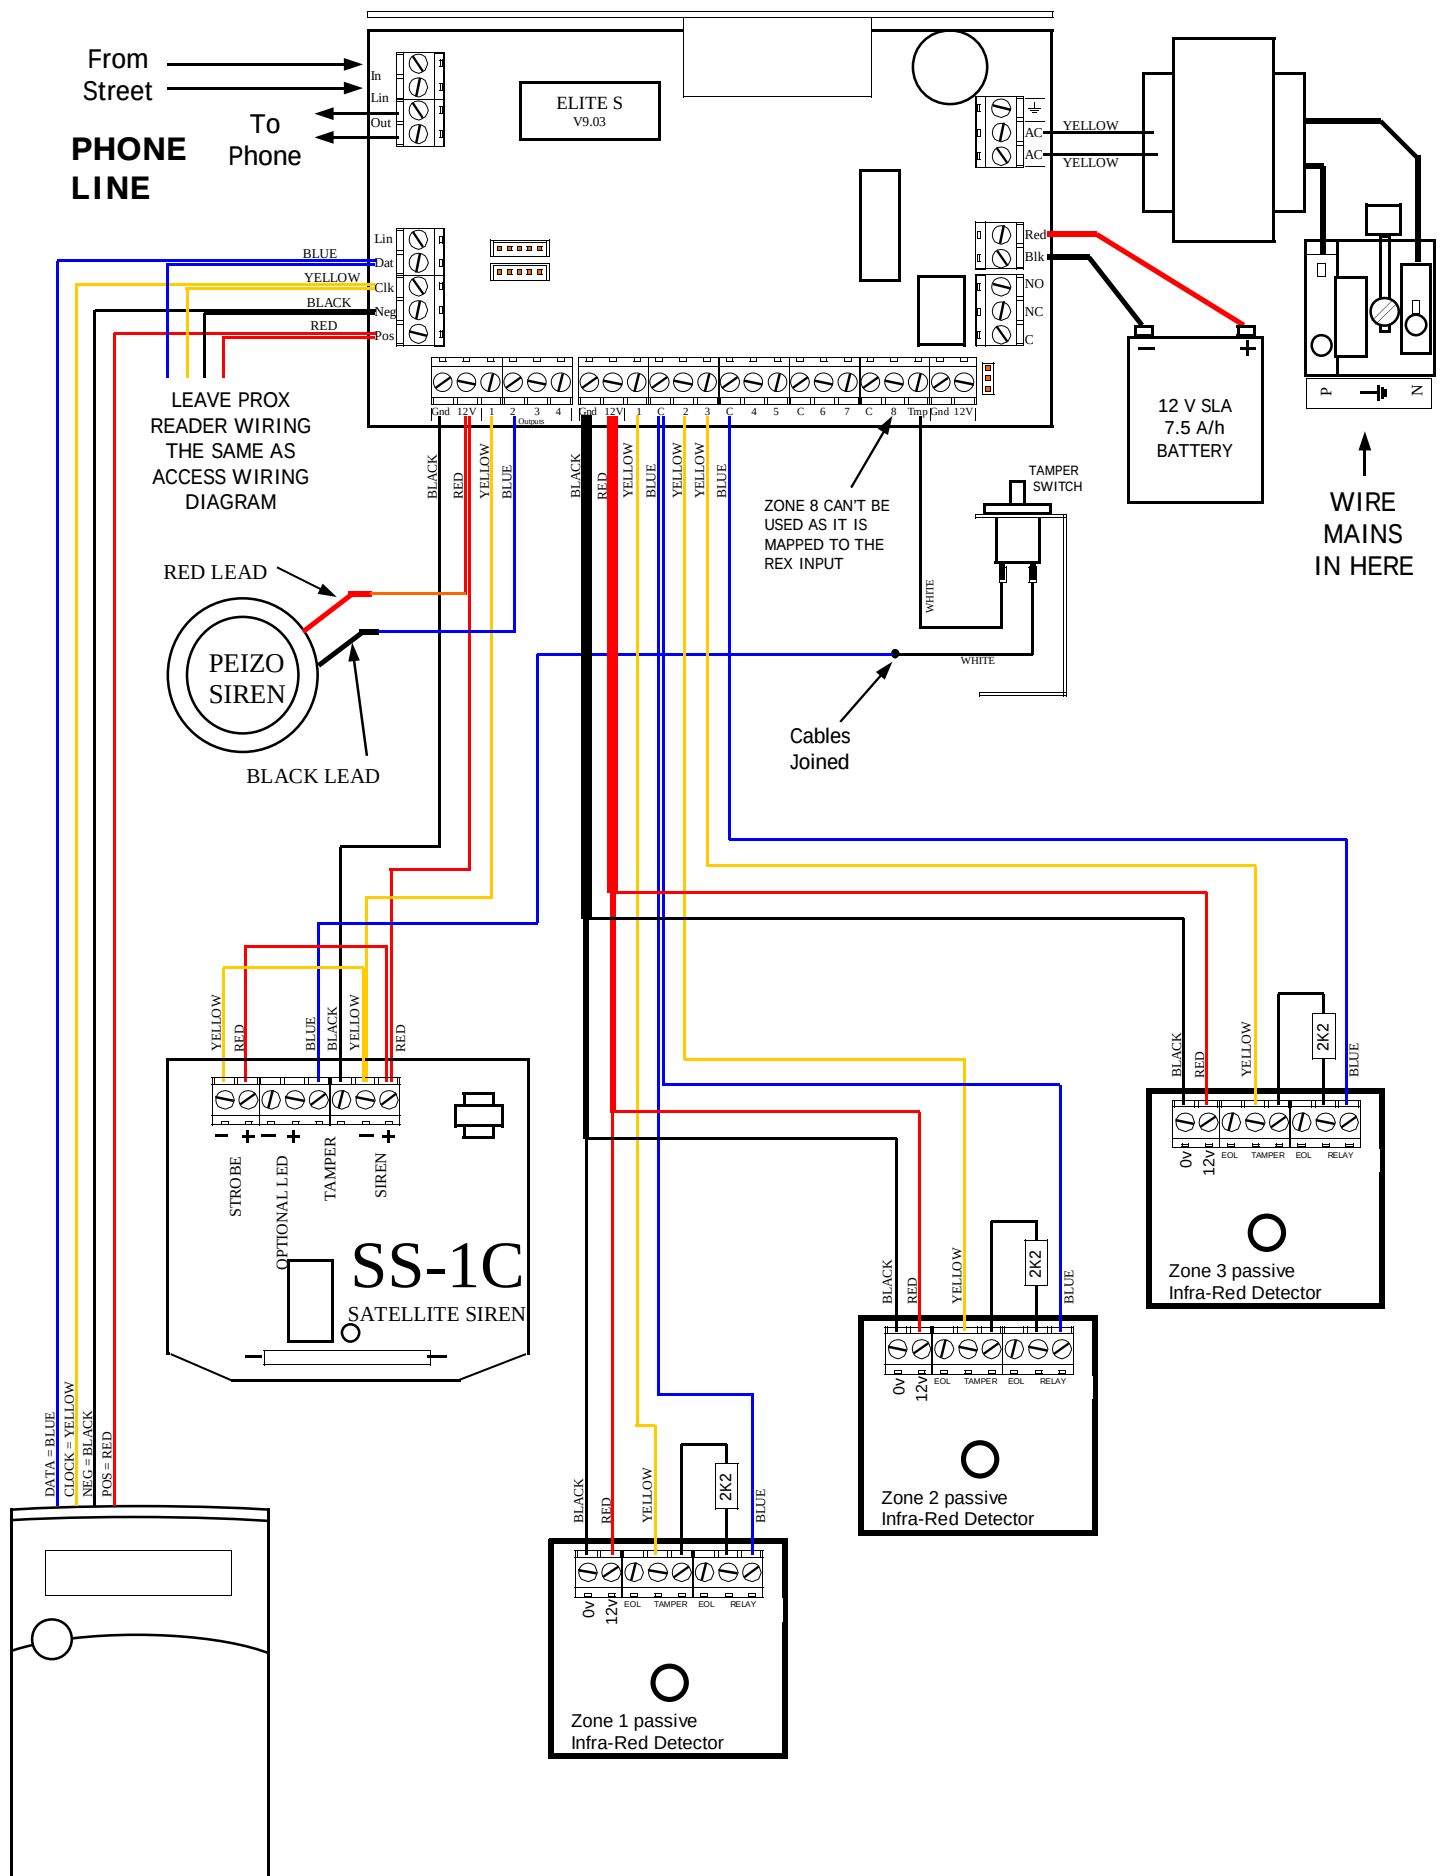

ALARM PROGRAMMING

Only start this Programming sheet once the Access Programming has been Completed.

Enabling Zones

As default all zone are disable, you need to enter program mode and turn on the zones you wish to use.

So in Installer Mode press **<PROGRAM> <122> <ENTER>** (then select the zone you wish to turn on **1-7**) and **<ENTER>** then turn ON option **<1>** and **<ENTER>**.

(if you followed the wiring diagram, you will need to do this same procedure for zones 1, 2 & 3)

P 122 E 1 E 1E (zone 1 activated).

P 122 E 2 E 1E (zone 2 activated).

P 122 E 3 E 1E (zone 3 activated).

Changing Entry delay's

Zone 1 is set at 20 seconds by default and should be used as entry zone

This is how long the panel gives you to get in and disarm it after a sensor has been tripped.

Each sensor has its own delay from 0 to 9999 seconds. If you have to pass a sensor to get to the keypad then it should have a delay. In Installer Mode press **<PROGRAM> <144> <ENTER>** (then select the zone you wish to change **1-7**) and **<ENTER>** (then put in the new time **0-9999**) and **<ENTER>**.

P 144 E 1 E [][][] E (zone 1 default delay is 20 seconds).

P 144 E 2 E [][][] E (zone 2 default delay is 0 seconds).

P 144 E 3 E [][][] E (zone 3 default delay is 0 seconds).

Changing Exit delay

This is how long you have to get out of the house before the panel goes into alarm mode.

You can have from 0 to 255 second selected below. In Installer Mode press **<PROGRAM> <60> ENTER <1> <ENTER>** (then put in the new time **0-255**) and **<ENTER>**.

P 60 E 1 E [][][] E (the default time is 30 seconds).

User Permissions

As default all users can Arm and Disarm on the LCD KP

To change a Users permission to Arm and Disarm follow these steps:

In Program Mode Press **<PROGRAM> <4> <ENTER>** then select the user you wish to change (**1-100**) and **<ENTER>**, the KP will then display by showing numbers what the current permissions are. (as default 1, 3 & 4 and on for all users).

1 = User many Arm.

2 = User many Arm Stay Mode.

3 = User many Disarm.

4 = User many Disarm Stay Mode.

i.e. **P 4 E 6 E 1 E** (user 6 can no longer Arm the panel)

Output Reset Times

This is how long the sirens will sound before turn off automatically. Time is in seconds.

In Installer Mode press **<PROGRAM> <40> <ENTER>** (then the output you wish to change **1** or **2**) and **<ENTER>** (now put in the new reset time **0-9999**) and **<ENTER>**.

P 40 E 1 E [][][] E (output 1 default reset time is 300 seconds).

P 40 E 2 E [][][] E (output 2 default reset time is 300 seconds).

DIALLER SETUP

Your Elite S Controller is equipped with a dialler.

If you are required to connect to a central monitoring station you will need to complete the following steps. Contact a monitoring station of your choice, they will issue you an account number and telephone number.

Name of monitoring station_____ Contact phone number_____

Your Account number [][][][][]

Telephone number 1 [][][][][][][][][][][][]

Telephone number 2 [][][][][][][][][][][] (this is optional)

- Step 1: Connect across the incoming phone line between the street and the first jack point.
- Step 2: Enable the dialler. In Installer Mode press **<PROGRAM> <175> <ENTER> <1> <ENTER>** (then turn ON option 1) and **<ENTER>**.
P 175 E 1 E 1 E
- Step 3: Account number. In Installer Mode press **<PROGRAM> <62> <ENTER> <1> <ENTER>** (then put in the 4 digit account number) **<ENTER>**.
i.e. **P 62 E 1 E 1234 E** (the new account code would be 1234)
- Step 4: Phone number 1, In Installer Mode press **<PROGRAM> <181> <ENTER> <1> <ENTER>** (now key in your given phone number 1) and **<ENTER>**.

I.e. **P 181 E 1 E 095551234 E** (the new phone number 1 would be 095551234)

Phone number 2, In Installer Mode press **<PROGRAM> <181> <ENTER> <2> <ENTER>** (now key in your given phone number 2) and **<ENTER>**.

I.e. **P 181 E 2 E 095554321 E** (the new phone number 2 would be 095554321)
- Step 5: Prepare for dialler test. First we will temporarily disable sounders. In Installer Mode press **<PROGRAM> <25> <ENTER> <9> <ENTER> <1> <2> <ENTER>** (outputs 1 & 2 have been disabled until an Arm cycle has taken place).

P 25 E 9 E 1 2 E
- Step 6: Exit program mode by pressing and holding **<PROGRAM>**
- Step 7: Testing. Press the **<ARM>** button the exit delay will start. When it stops walk in front of each detector, then go back to the keypad to see if LED's 1 & 2 are now flashing and the keypad is squealing. As soon as the entry delay has finished, the panel should start dialling out. You won't be able to hear it dial out, but if you pick up a phone in the house it should not have a dial tone. Leave the panel for about 2 minutes then key in a user code i.e. **<1 2 3>** followed by **<ENTER>**. The panel should now be disarmed.
- Step 8: Confirming. Now contact the monitoring station and ask them if they received 4 different monitoring messages from your account code. They should be:
Alarm activation on zone 1.
Alarm activation on zone 2.
Alarm activation on zone 3.
Alarm restored.

Dialler Setup is Complete