

IAP for IP-MODULE Field Updater & Configuration Viewer

To use this software on an IP-Module,
you must have:

- 1 x IP-Module**
- 1 x USB D-Link (Upload/Download cable)**
- 1 x PC or Laptop running Windows 98, XP, Vista or 7**

Install the software package by double clicking on:
IAP Setup.exe

Choose the **No-Questions-Asked** Installation option.

The auto install program will then put 2 icons on your desktop called:
IAP & Socket*

*Socket is a IP monitoring station test simulator, that can be used to test that the IP-Module is reporting correctly.

1. Plug your USB D-Link into the PC
2. Open **IAP**.
3. Click on **File**, then **Setup**, choose the USB D-Link's Com port and then **Done**.
4. Now plug the USB D-Link into the IP-Module.
5. Click on **Connect**.
6. Once connected, clicking on **About** will retrieve the IP-Modules info.
Useful information includes it's IP address and Port number.

7. To perform a field update on your IP-Module, you can download the latest software from www.aap.co.nz


8. Then click on the **Open file** icon.

9. Find and select the .AXP file you have downloaded and **Open** it.


10. Click on **Update**.

Warning do not power down or disconnect the IP-Module whilst update is in progress.

If you are using Windows 7 the IAP software must be run in Compatibility mode.
step 1. right click on the IAP Icon.
step 2. click on Properties

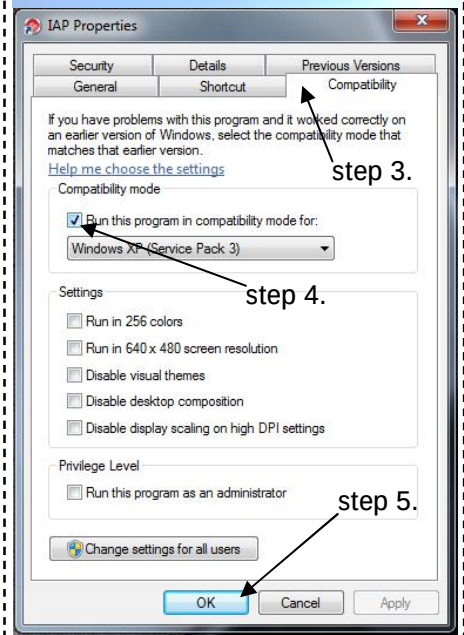

3.

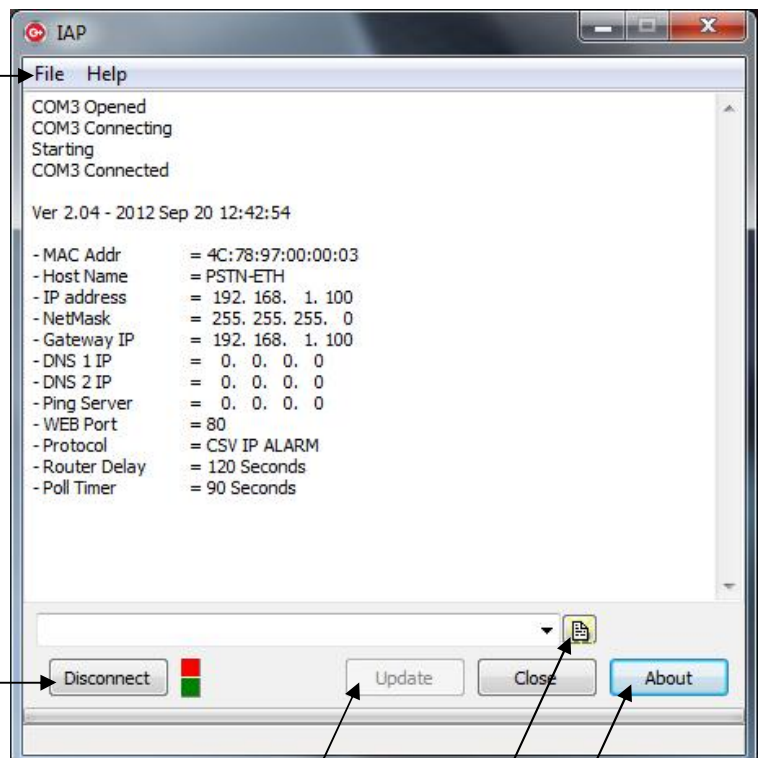

ARROWHEAD
ALARM PRODUCTS Ltd.
344b Rosedale Rd,
Albany,
Auckland.
Ph. 09 414 0085
www.aap.co.nz
v1.0

