

INTEGRITI PANEL CHANGEOVER

PRODUCTS: INTEGRITI ISC / IAC

Introduction: How to complete a ISC /IAC panel replacement.

This KBA is to provide information on how to swap out a faulty panel on Integriti.


Important:

- An ISC can only be replaced with another ISC. An IAC can only be replaced with another IAC.
- Always create a backup of the programming before completing this procedure. A KBA with instructions for this can be found [here](#).

To changeover a panel on an existing site, please use the following steps.

Right click on the controller and select 'Disconnect'.

Right click on the controller and select 'Edit'.

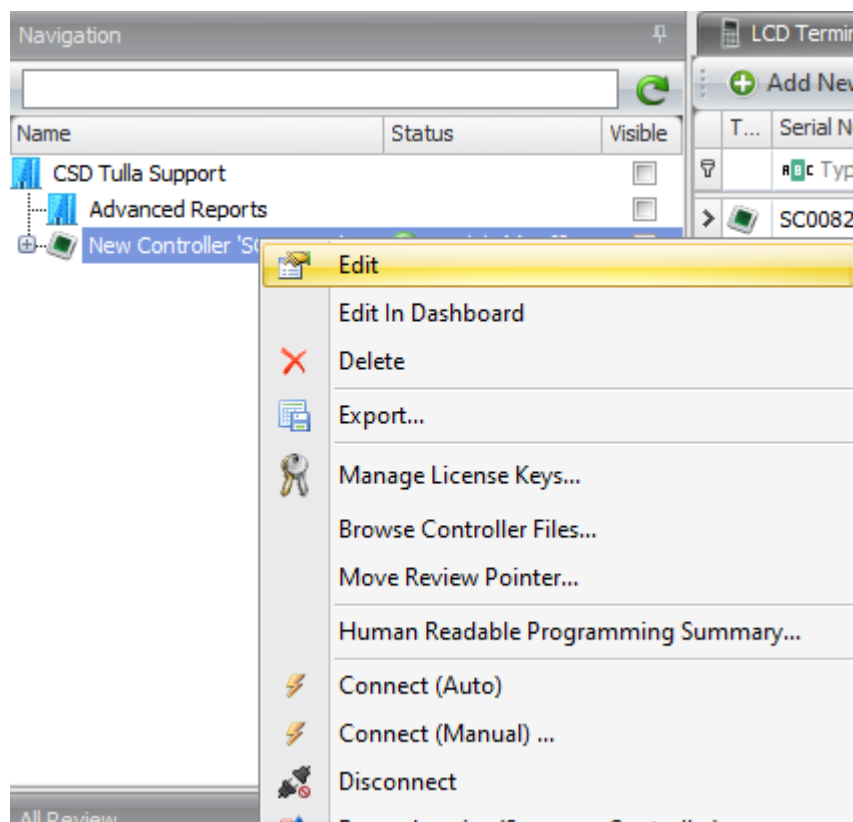



Change the 'Data Sync Mode' to 'Disallow Changes From Controller'
Enter the Serial Number of the new panel
Select Save.

Module Details Connection Details

Basic Details

Name

Serial Number

Hardware Type

Properties


Connectivity

Synchronisation


Review Synchronisation Mode	Continuous
Don't Sync Time Upon Connection	☐
Time Zone	(UTC+10:00) Canberra, Melbourne, Sydney
Enable Data Synchronisation	☐
Data Sync Mode	Disallow Changes From Controller
Prevent State Syncing	☐



Right Click on the controller and select 'Connect Manual'

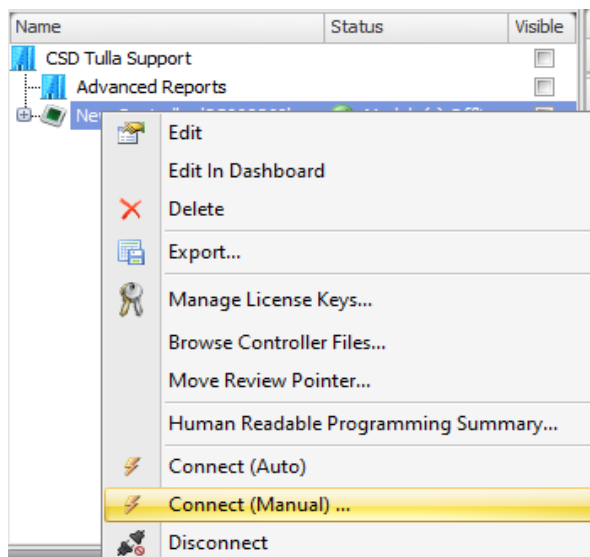


Confirm that the Synchronisation is set for 'Disallow Changes from Controller'
Select 'Connect'

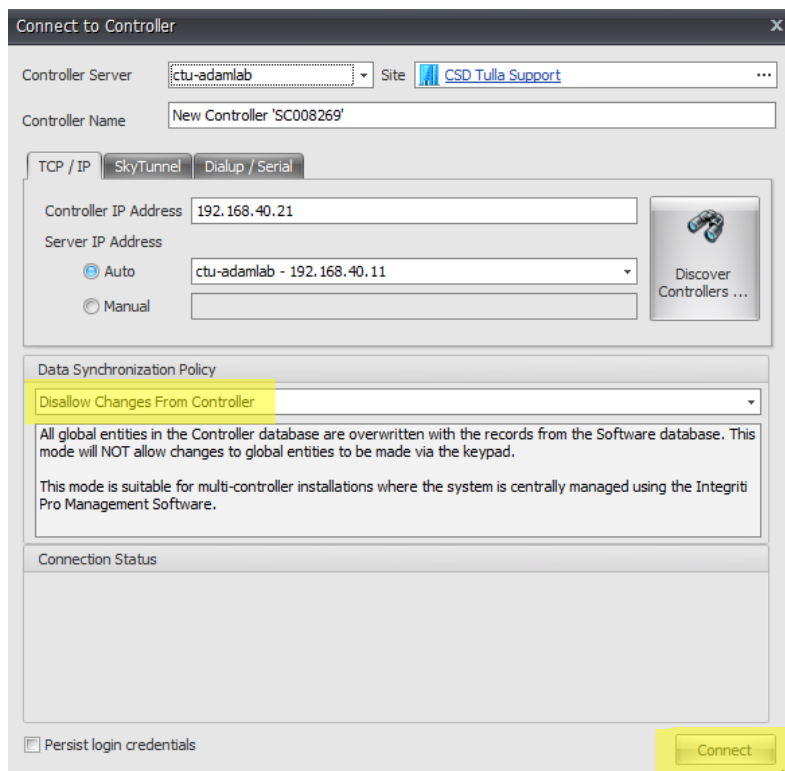



Once the new controller has connected.

Right click on the controller and select 'Resynchronize (Server -> Controller)'

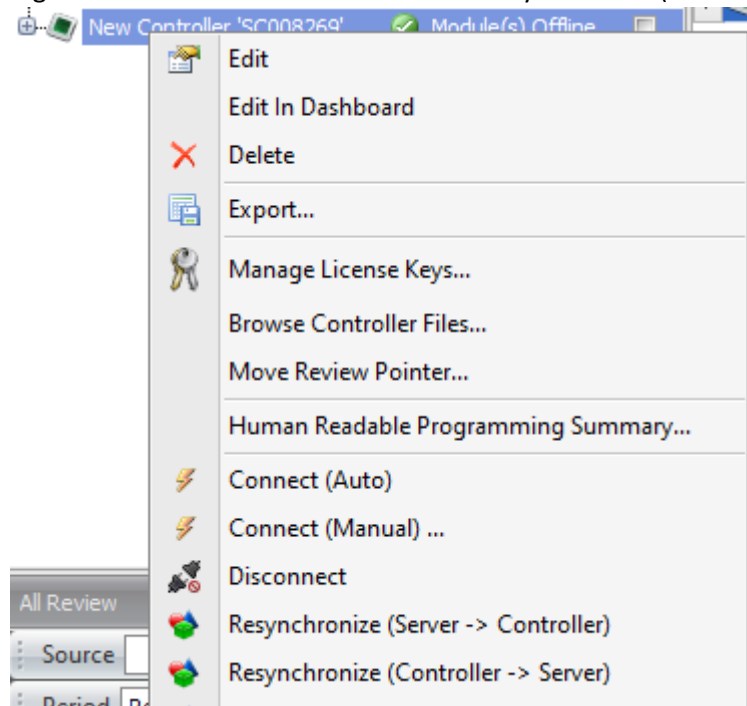

The data from the software should now load into the panel and become operational.

You can now change the 'Data Sync Mode' back to what it was.