

P98xE	Set defaults P98 1E Standard defaults P98 2E Client Program defaults P98 3E SIU default Serial Data Format P98 4E Clear Alarm Memory P98 5E SIU default 15 pin alarm format		
P99E	Install code	000000	

Code	SIU Program Option	Default	Setting
P50E	Hard I.D.	0000	
P51E	Long Reports	0 (disabled)	
P52E	Alert Tone Delay Time	55 secs	
P53E	Comms Fail Time	3 min	
P54E	Aux 1 Delay	0 secs	
P55E	Aux 1 Pulse Duration	0 secs	
P56E	Aux 2 (Relay) Delay	0 secs	
P57E	Aux 2 (Relay) Pulse Duration	1 sec	
P58E	Auxiliary Output Enable 1 - 2 Remote Arming Enable 3 - 7 Upload/Download Enable 8	1 - on, 2 - off, 3 - off, 4 - off, 5 - off, 6 - off, 7 - off, 8 - off	
P59E	Low Tone Level (1-9)	4	
P60E	Open/Close Reporting 1 = Full Serial 2 = All Partial 3 = Admin Only 4 = No open/close report	3	
P61E	Zone Channel Mapping		
P62E	Tamper Channel Mapping		
P63E	System Channel Mapping		
P64E	Power Channel Mapping		
P65E	Multiple Reporting (1 or 2) 1 = Do not send multiples	Multiples	
P66E	Restore Reporting (1 - 4) 1 = Send restores after siren 2 = Send Restores on opening 3 = Send restores when restored 4 = Do not send restores	1	
P67E	Mains Fail Delay	60 mins	
P68E	Abort Delay	10 secs	
P69E	Abort Zones	0	
P70E	Communication Fail Enable ON = Enabled	Enabled	

PRO - LX **SIU** **Installation Summary Sheet**



SYDNEY 02 8825 9222 MELBOURNE 03 9875 6400
BRISBANE 07 3343 7744 PERTH 08 9328 2511

Code	Program Option	Default	Setting
P1E- P16E	Client codes 1 to 16 (allowed in client mode)		
P17E	Entry delay time (also client mode)	20 secs	
P17xE	Entry delay time for Area (also client mode) P170E Entry Delay for common access zones P171E Area 1 Entry Delay P172E Area 2 Entry Delay P173E Area 3 Entry Delay	20 secs 20 secs 20 secs 20 secs	
P18E	Exit delay time (also client mode)	60 secs	
P18xE	Exit delay time for Area (also client mode) P181E Area 1 Exit Delay P182E Area 2 Exit Delay P183E Area 3 Exit Delay	60 secs 60 secs 60 secs	
P19E	Security delay Zone	none	
P20E	Instant Zone	Zones 3-24	
P21E	Delay Zone	Zone 1	
P22E	Handover Zone	Zone 2	
P23E	Secondary delay Zone	none	
P24E	spare		
P25xE	Zone sensitivity level P251E Level = 1 (highest) to P258E Level = 8 (lowest)	4 - all zones	
P26xE	Zone sensitivity vibration P261E Level = 1 (highest) to P268E Level = 8 (lowest)		
P27xE	Zone triggers P271E 1 Trigger P272E 2 Trigger	1 trigger (all zones)	
P28E	Siren reset time	10 mins	
P29xE	Lockout ● P291E Zone Lockout P292E Tamper Lockout P293E System Lockout P294E Power Lockout	All Lockout All Lockout None Lockout None Lockout	
P30xE	Excludable ● P301E Zone Excludable P302E Tamper Excludable P303E System Excludable P304E Power Excludable	All Excludable All Excludable All Excludable All Excludable	
P31xE	Zone assignment to area P310E Zone to Admin. Area P311E Zone to Area 1 P312E Zone to Area 2 P313E Zone to Area 3	All Zones none none none	
P32xE	Dual Monitor Zone assignment P321E Zone to Monitor 1 P322E Zone to Monitor 2	None None	
P33E	Button Options:		
	1 ○ One Key: ● = Two key	1 = ○	
	2 ○ Arm with code ● = Code optional	2 = ●	
	3 ○ Exclude with code, ● = Code optional	3 = ●	

P34E	Miscellaneous system options:		
	1 ● Keyswitch restrict ○ KS Unrestrict	1 ○	
	2 ● "Pop" sirens on KS ○ Silent KS	2 ○	
	3 ● Auto-exclude ○ No Auto-exclude	3 ○	
	4 ● Entry beeps ○ No beeps	4 ●	
	6 ● No zone Tamper ○ Zone Tamper	6 ●	
	7 ● Aux 1 Armed ○ No Aux 1 Armed	7 ○	
	8 ● Instant zone warning ○ No zone warning	8 ○	
P35xxE	Zone armed output (0-31) P35 0E Disable P35 1 E Output 1 to P35 31 E Output 31	17 - all zones	
P36xxE	Zone disarmed output (0 - 31)	0 - all zones	
P37xxE	Zone monitor output (0 - 31)	20 - all zones	
P38xxE	Zone 24 Hour output (0 - 31)	0 - all zones	
P39xxE	Tamper output (0 - 31)	27 - all zones	
P40xxE	System output(0 - 31)		
P41xxE	Power output (0 - 31)		
P42xxE	General Purpose Timer output (0 - 31)		
P43xxE	Options for configurable output P43 1E Output 1 options to P43 15E Output 15 options		
P44xE	Zone exit security either P441E or change to P44E	No zones	
P45E	Maintenance procedures P45E 1E Walk Test P45E 2E Auto Test Enable		
P80xxE	Set options 1 to 10 for outputs P80 1E Output 1 options 1-10 to P80 15E Output 15 options 1-10	See Configuration chapter	
P81xxE	Set options 11 to 16 for outputs P81 1E Output 1 options 11-16 to P81 15E Output 15 options 11-16	See Configuration chapter	
P82E	Enable Peripherals P82E 1 E Enable Satellite P82E 2 E Enable SIU P82E 3 E Enable Radio	Disabled Enabled Disabled	
P93E	Medical delay (0 - 48)	0	
P94E	General purpose timer delay	0	
P95E	General purpose timer duration	0	
P96E	Code retry limit (0 - 9)	2	
P97E	Duress prefix (0 - 9)	9	