

## CONCEPT 3000 Port 0 Interface Cable. P/N: 993030

The Port 0 Interface cable, allows for a PC, Monitor, or Printer to be connected to a Concept 3000 / Access 4000 Control Module without requiring any other interface board.

It is intended for use during commissioning and for service purposes only, typically as a temporary connection of a PC for Upload/Download programming.


This Port shares the on-board modem with the Line interface and therefore **MUST NOT** be used as a permanent connection.

**Note that Port 0 cannot be used if the on-board modem is in use. i.e. When an EarthNet direct line Comms Task is active, or when a Dialer Comms Task is in use.**

### Installation:

1. Connect the 5 way plug onto the Header labelled JP1 on the Control Module, aligning so that the sequence of pins on the Header matches with the contacts available on the Socket.  
(Pin 4 on the socket is Not Used)
2. Connect the 25 Way D connector to a Serial Port on the other device (PC, Printer, etc.)
3. Program a Comms Task for the required format (PC Direct, Printer, or Monitor), selecting Port 0 as the Port to use, and a baud rate of 4800 or lower.

Control Module PCB

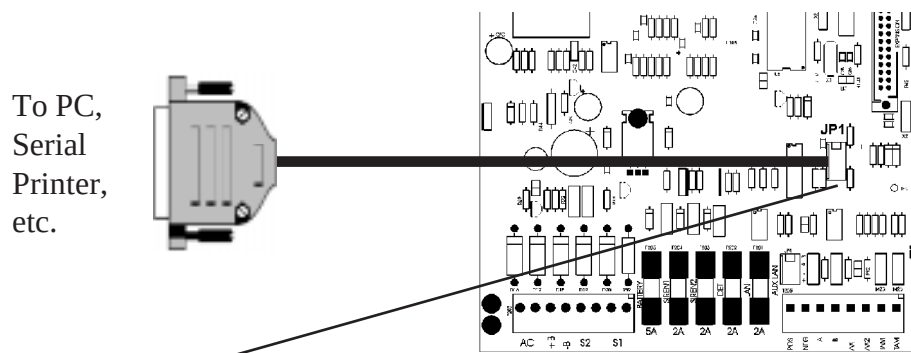

JP1. Port 0. Note: JP1 orientation is rotated 90° anti-clockwise on earlier Control Module PCBs. i.e. Pin 1 on the left.

## CONCEPT 3000 Port 0 Interface Cable. P/N: 993030

The Port 0 Interface cable, allows for a PC, Monitor, or Printer to be connected to a Concept 3000 / Access 4000 Control Module without requiring any other interface board.

It is intended for use during commissioning and for service purposes only, typically as a temporary connection of a PC for Upload/Download programming.


This Port shares the on-board modem with the Line interface and therefore **MUST NOT** be used as a permanent connection.

**Note that Port 0 cannot be used if the on-board modem is in use. i.e. When an EarthNet direct line Comms Task is active, or when a Dialer Comms Task is in use.**

### Installation:

1. Connect the 5 way plug onto the Header labelled JP1 on the Control Module, aligning so that the sequence of pins on the Header matches with the contacts available on the Socket.  
(Pin 4 on the socket is Not Used)
2. Connect the 25 Way D connector to a Serial Port on the other device (PC, Printer, etc.)
3. Program a Comms Task for the required format (PC Direct, Printer, or Monitor), selecting Port 0 as the Port to use, and a baud rate of 4800 or lower.

Control Module PCB

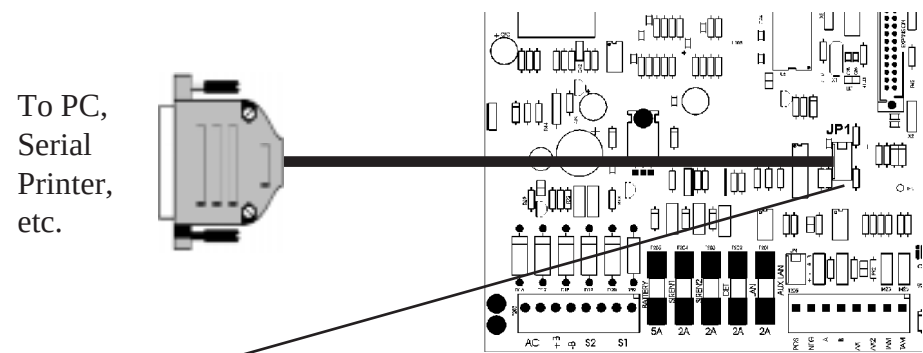

JP1. Port 0. Note: JP1 orientation is rotated 90° anti-clockwise on earlier Control Module PCBs. i.e. Pin 1 on the left.