

Test Sirens

Siren outputs can be tested to ensure that they are fully operational. The “Test Sirens” option provides a simple and convenient procedure for doing this.

Siren to Operate: C01

This display will prompt the Installer to enter the Module ID of the Siren/s that are to be tested.

The display shows the Control Module Sirens by default. Expander Module Sirens may be tested by first pressing OFF to clear the screen and then entering the letter/number of the Expander Module followed by the OK key.

- C01 = Control Module (Main Panel)
- E01 = Expander Module 1
- E02 = Expander Module 2
- B01 = Big Expander Module 1
- B02 = Big Expander Module 2

NOTE:
When mapping Sirens, both “E” Type Expanders and “B” Type Expanders are considered to be one and the same. When testing or activating the Siren attached to E01, Sirens attached to both E01 and B01 will sound.

Conversely, when testing or activating the Siren attached to B01, Sirens attached to both B01 and E01 will sound.

E01 Sirens are Off. Press On.

The display will now show the Module ID and Siren test status. Press the On key or Off key to turn Siren testing On and Off as required.

While Siren Test is ON, the DIGIT keys may be used to:

- Alter the Siren Tone.
- Select which Siren Outputs to activate.

Key No.	Tone
1	Bell
2	Sweep
3	Fire
4	Evacuation
	Output
8	Internal Siren Only
9	External Siren Only
<ON>	Both Sirens
<OFF>	Turn All Sirens Off

Another Module may be selected for Siren Testing by using the UP and DOWN arrow keys.

When complete, press the OK key to return to the “Siren to Operate” display.

