

QUICK PROGRAMMING GUIDE FOR: SC-06 STAND ALONE PROX READER AND KEYPAD CONTROLLER.

New SC-06 Controllers will have no engineer or admin codes in their memory. No other programming options are accessible until these two codes are entered. So follow these steps bellow to get started.

Power Up Controller. Orange LED ON “a beep will sound every 3 second”

Programming Engineer Code

Enter New Engineer Code.  # “a long beep, Green LED then Orange/flashing LED”

Re-enter Engineer Code.  # “a long beep, Green LED then Orange LED”

Exit Program Mode. 0 0 0 # “a short beep, Red LED”

Programming Admin Code

Enter Your Engineer Code.  # “a long beep, Green LED then Orange LED”

Enter 2 0 3 # “a long beep, Green LED then Orange/flashing LED”

Enter New Admin Code.  # “a long beep, Green LED then Orange/flashing LED”

Re-enter Admin Code.  # “a long beep, Green LED the Orange LED”

Exit Program Mode. 0 0 0 # “a short beep, Red LED”

Programming User Codes

Enter Your Admin Code.  # “a long beep, Green LED then Orange LED”

Loading to Slot 1, Enter 1 1 1 # “a long beep, Green LED then Orange/flashing LED”

Enter New Code  # “a long beep, Green LED then Orange LED”

Loading to Slot 2, Enter 1 1 2 # “a long beep, Green LED then Orange/flashing LED”

Enter New Code  # “a long beep, Green LED then Orange LED”

Loading to Slot 3, Enter 1 1 3 # “a long beep, Green LED then Orange/flashing LED”

Enter New Code  # “a long beep, Green LED then Orange LED”

Loading to Slot 4, Enter 1 1 4 # “a long beep, Green LED then Orange/flashing LED”

Enter New Code  # “a long beep, Green LED then Orange LED”

Exit Program Mode. 0 0 0 # “a short beep, Red LED”

PROX TAGS

You can add up to 512 Tag users to the SC-06, these are divided into 4 category's (each capable of holding 128 users). When you load a Tag you must select one of these category's:

- 1 = MASTER
- 2 = PRIVILEGED
- 3 = GUARD
- 4 = COMMON USER (see page 14 of installation manual for more information).

Programming Prox Tags

Enter Admin Code.  # "a long beep, Green LED then Orange LED"

Enter. 1 2 1 # "a long beep, Green LED then Orange/flashing LED"

Now Put in the Category. 1 # "a long beep, Green/flashing LED"

Present the Tag You Wish to Learn. "a long beep, Green/flashing LED"

You can add more Tag's to this category, as long as the light is still flashing Green.

Exit Program Mode. 0 0 0 # "a short beep, Red LED"

Adding Pin Code Each Tag

Enter Admin Code.  # "a long beep, Green LED then Orange LED"

Enter. 1 2 2 # "a long beep, Green LED then Orange/flashing LED"

Present the Tag, to Have the Code Added. "a long beep, Green LED then Orange/flashing LED"

Enter New Code.  # "a long beep, Green LED then Orange/flashing LED"

Exit Program Mode. 0 0 0 # "a short beep, Red LED"

Notes:

Programming must not take more than 10 seconds, between key strokes.
If you do leave it over this time, the SC-06 will automatically leave Program Mode.

To delete all programming and return to default, hold down the # key then apply power, after 15 seconds the controller will start beeping and the LED will flash Orange. (will not delete Prox Tags)


To delete all Prox Tags:

Enter Admin Code.  # "a long beep, Green LED then Orange LED"

Enter. 1 0 0 # 1 0 0 # "a long beep, Green LED then Red/flashing LED"

Exit Program Mode. 0 0 0 # "a short beep, Red LED"

WIRING DIAGRAM

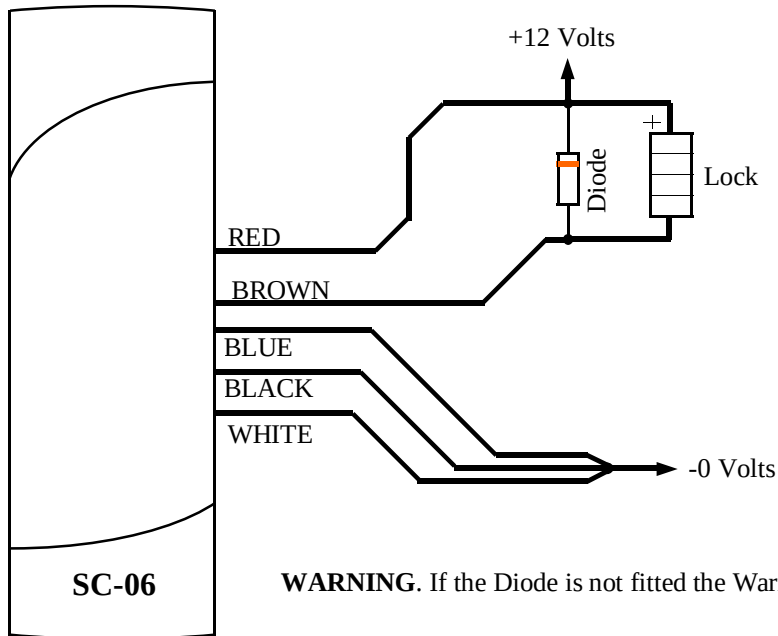

WARNING. If the Diode is not fitted the Warranty is invalid.



ARROWHEAD ALARM PRODUCTS
344B ROSEDALE RD,
ALBANY,
AUCKLAND,
NEW ZEALAND

PHONE: 09 414 0085
FAX: 09 414 0088

USER	ADDRESS	NAME	CODE
Slot 1	1 1 1		
Slot 2	1 1 2		
Slot 3	1 1 3		
Slot 4	1 1 4		

USER	GROUP	NAME	CODE
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			