

SIREN WIRING GUIDE



Arrowhead Alarm Products Ltd


CONTENTS PAGE:

PROGRAMMING....	2
SS-1C.....	3-4
SS-1 & SS-3.....	5-6
SS-1/BB & SS-3/BB.	7-8
SAT-TWIN.....	9-10
SAT-PLAS.....	11-12
MET-LS.....	13-14
MET-SP.....	15-16
ARROWSAT.....	17-18

06/04/2004

ARROWSAT (MS & SS)


1 OUTPUT, 4 CORE WIRING VERSION

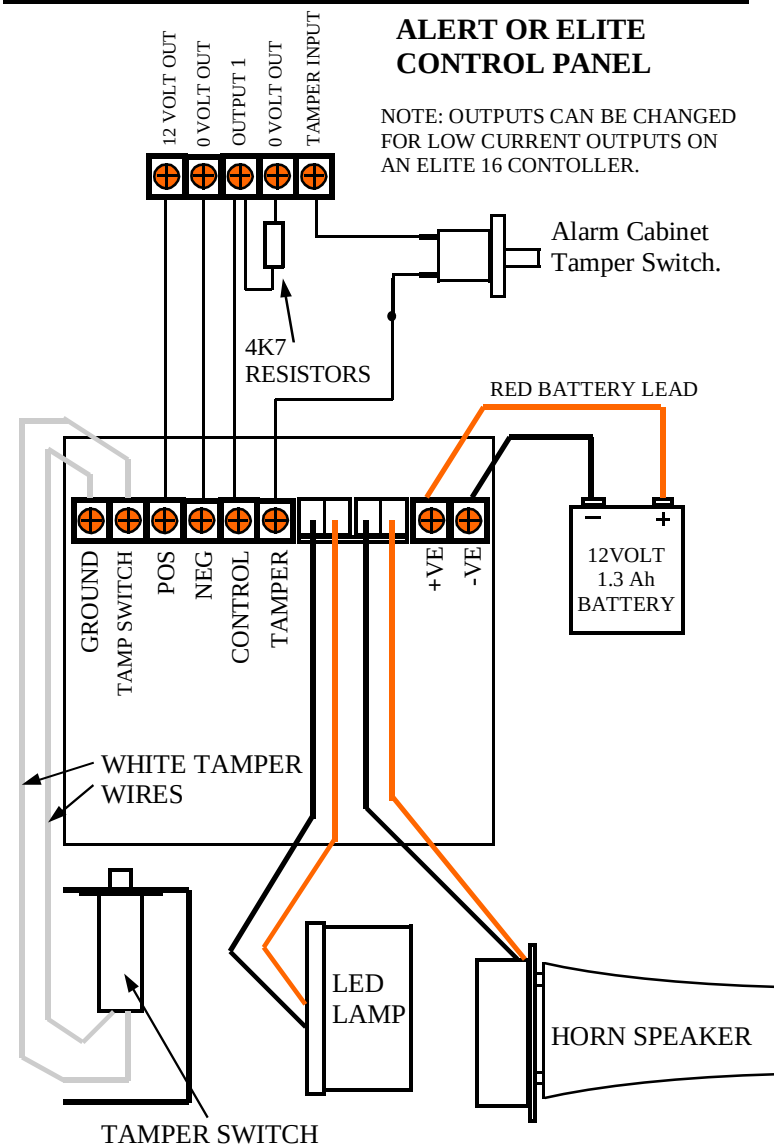

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

ARROWSAT (MS & SS)

2 OUTPUT, 4 CORE WIRING VERSION

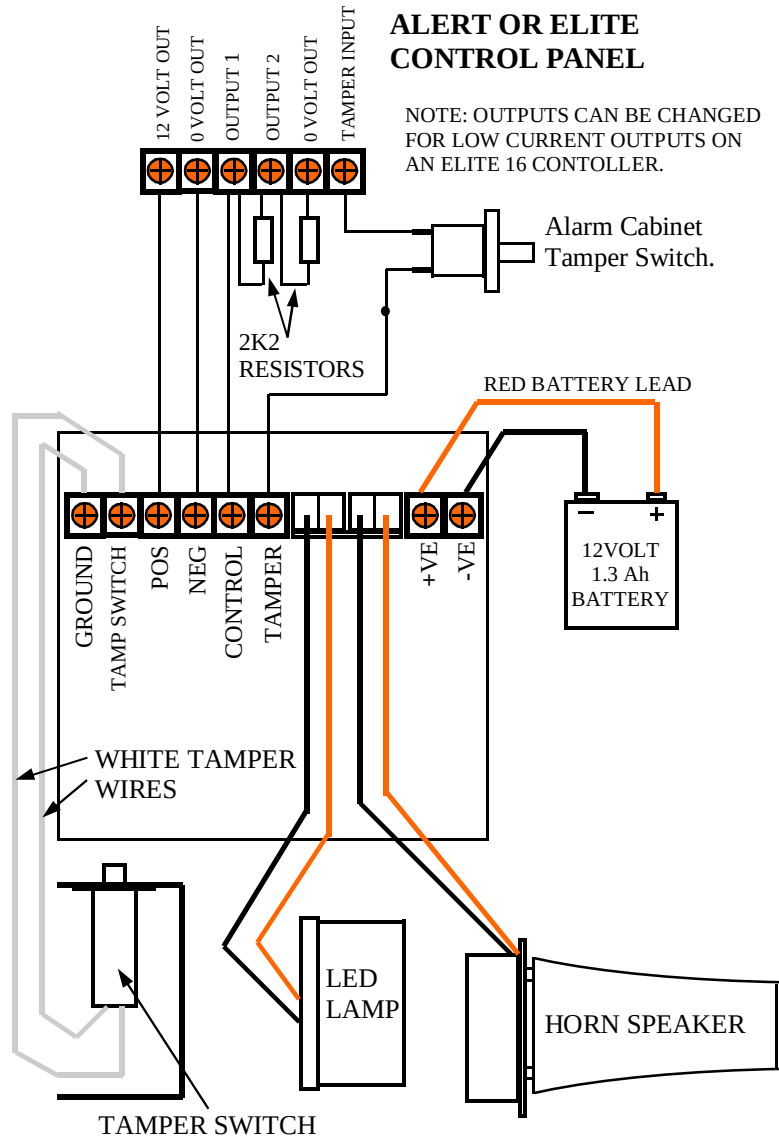

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

CONTROL PANEL PROGRAMMING REQUIREMENTS


	PW 4 & PW 8 (ALERT 8D)	PW 16 (ELITE 16D V6)	ELITE 16 V4 & V5
SS-1C	P 170 E 1 ON *P 33 E 2 ON	*P 203 E 2 ON	*P 103 E 2 ON
SS-1 & SS-3	P 170 E 1 ON	NO CHANGES REQUIRED	NO CHANGES REQUIRED
SS-1/BB& SS-3/BB	P 170 E 1 ON	NO CHANGES REQUIRED	NO CHANGES REQUIRED
SAT-TWIN	P 170 E 1 ON	NO CHANGES REQUIRED	NO CHANGES REQUIRED
SAT-PLAS	P 170 E 1 ON	NO CHANGES REQUIRED	NO CHANGES REQUIRED
MET-LS	P 170 E 1 ON P 32 E 2 ON	P 202 E 2 ON	P 102 E 2 ON
MET-SP	P 170 E 1 ON P 31 E 5 ON P 32 E 2 ON	P 310 E 2 ON P 202 E 2 ON	P 101 E 8 ON P 102 E 2 ON #
ARROWSAT	P 170 E 1 ON	NO CHANGES REQUIRED	NO CHANGES REQUIRED

*ONLY REQUIRE FOR 6 CORE WIRING CONFIGURATION.
#ON V5 PANEL SHIFT JUMPER ON PCB FOR SIREN TONE FOR OP1.

The programming changes are from standard Defaults.

SS-1C


6 CORE WIRING VERSION

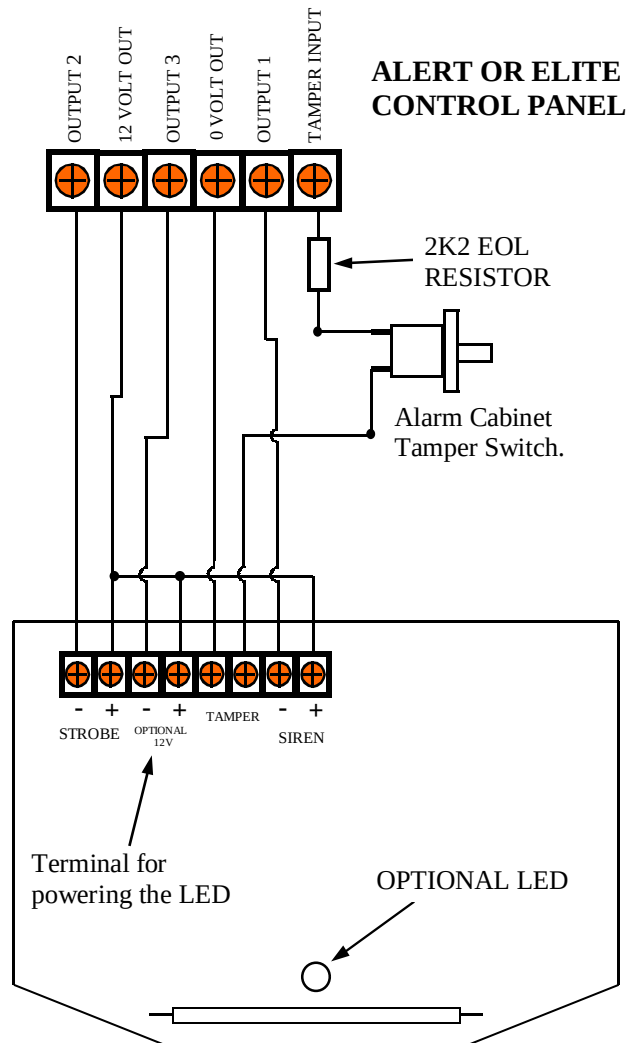

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

MET-SP (MS & SS)


4 CORE WIRING VERSION

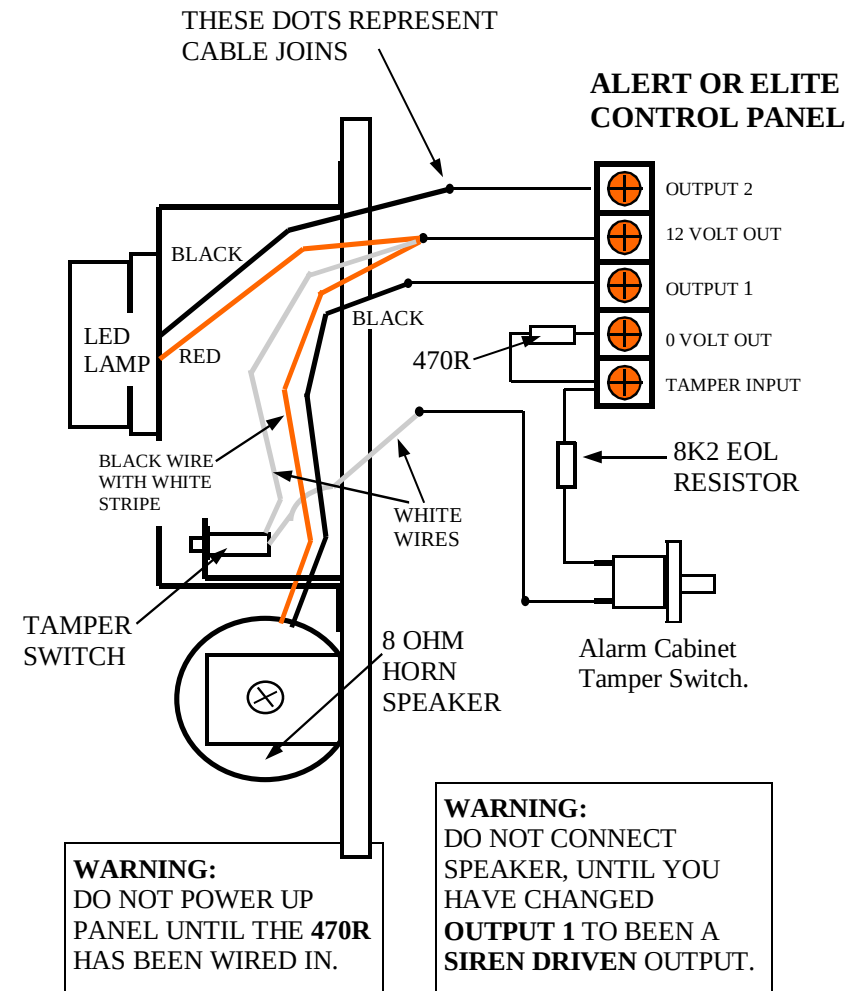

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

MET-SP (MS & SS)


6 CORE WIRING VERSION

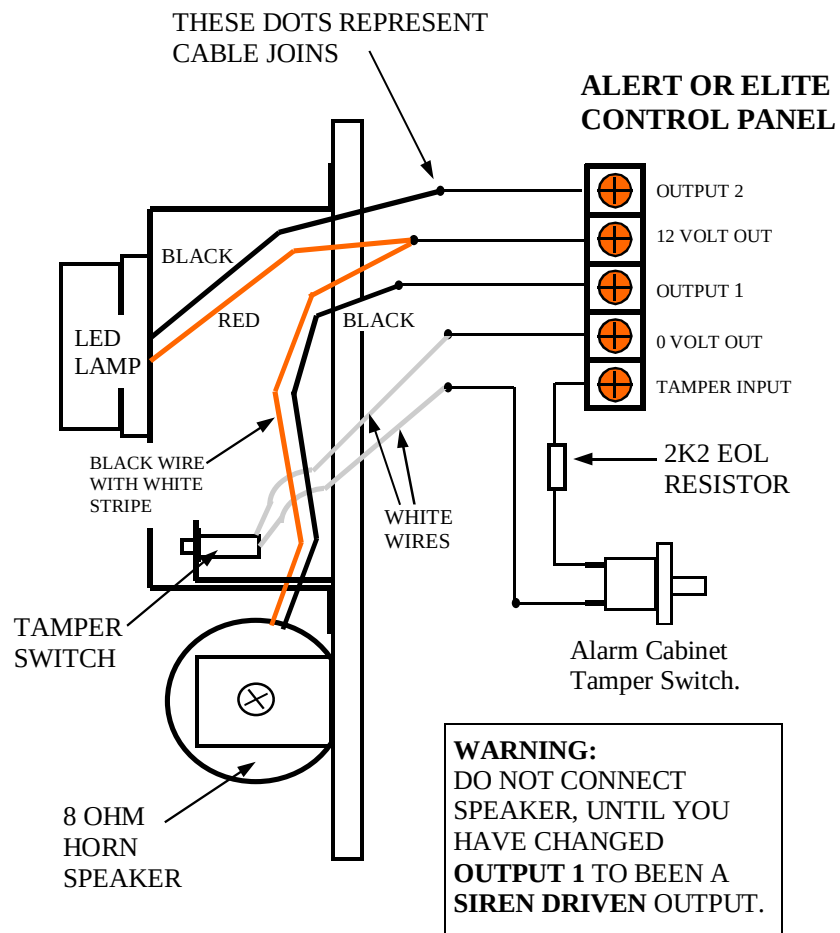

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SS-1C

4 CORE WIRING VERSION

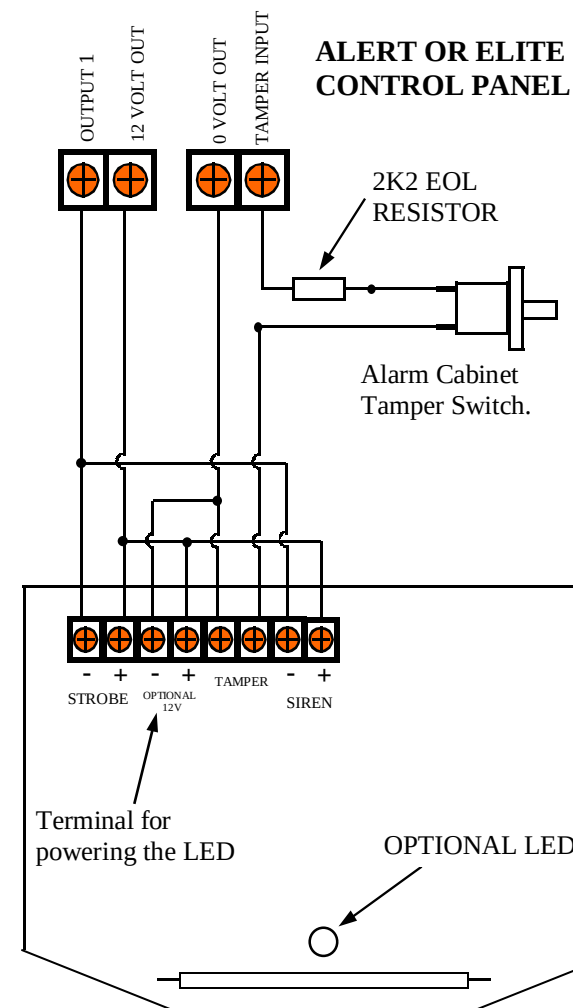


*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SS-1& SS-3 6 CORE WIRING VERSION




 MET-LS (MS & SS) 4 CORE WIRING VERSION



MET-LS (MS & SS)


6 CORE WIRING VERSION

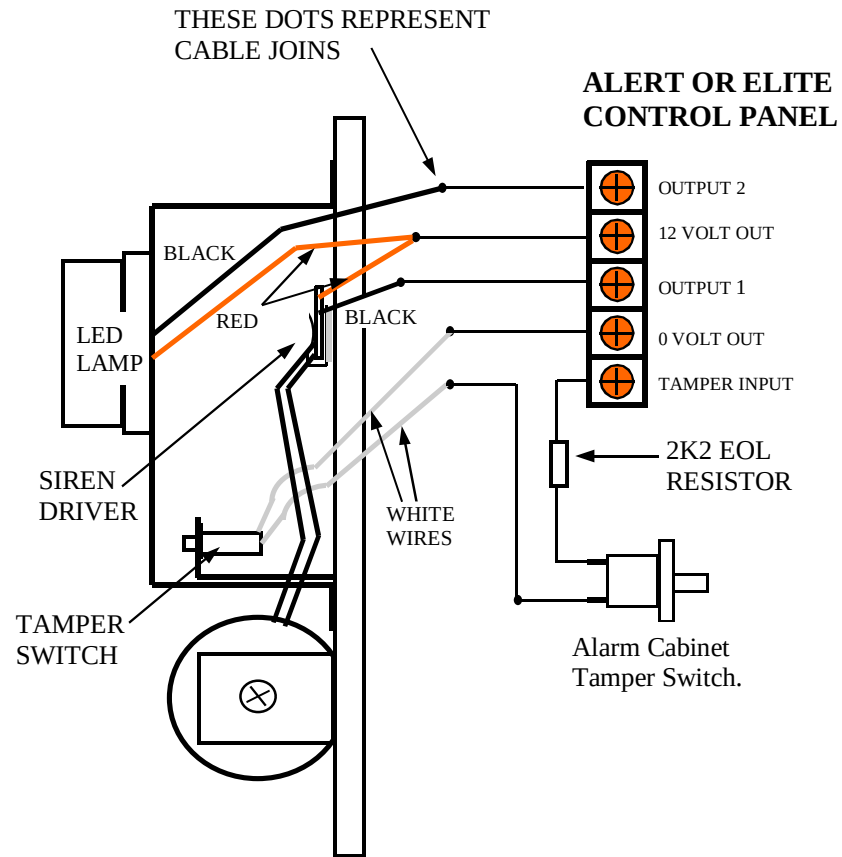

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SS-1 & SS-3


4 CORE WIRING VERSION

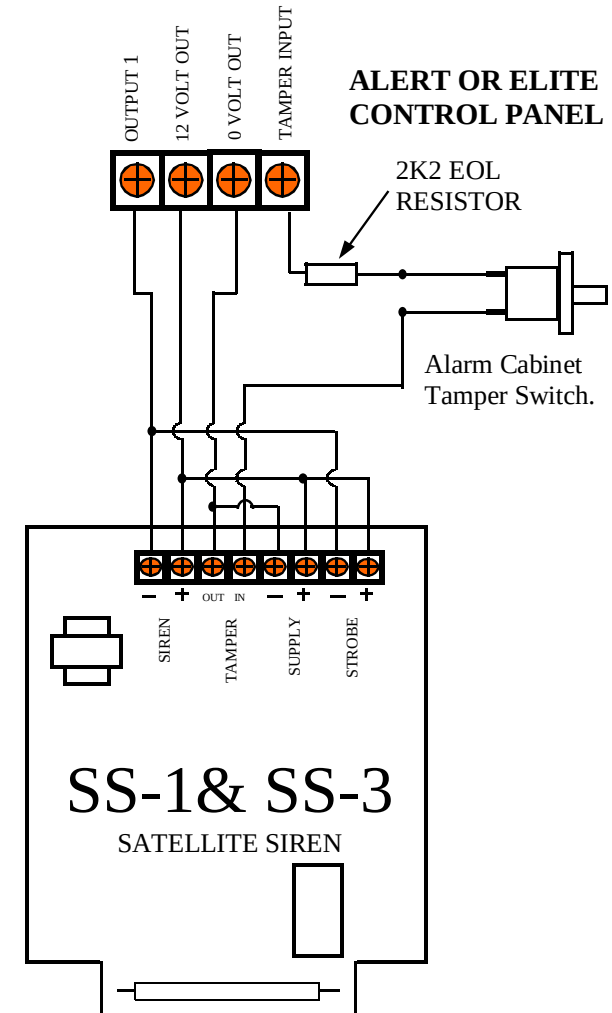

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SS-1/BB & SS-3/BB

6 CORE WIRING VERSION

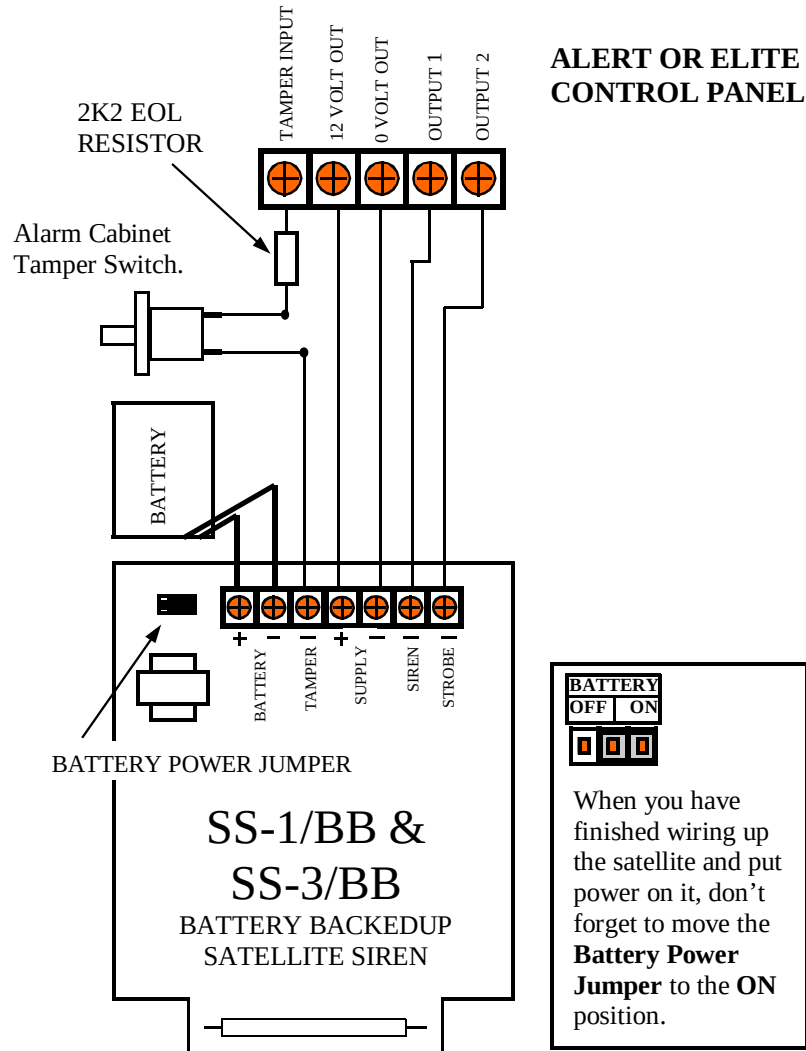


*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SAT-PLAS

4 CORE WIRING VERSION

ALERT OR ELITE CONTROL PANEL

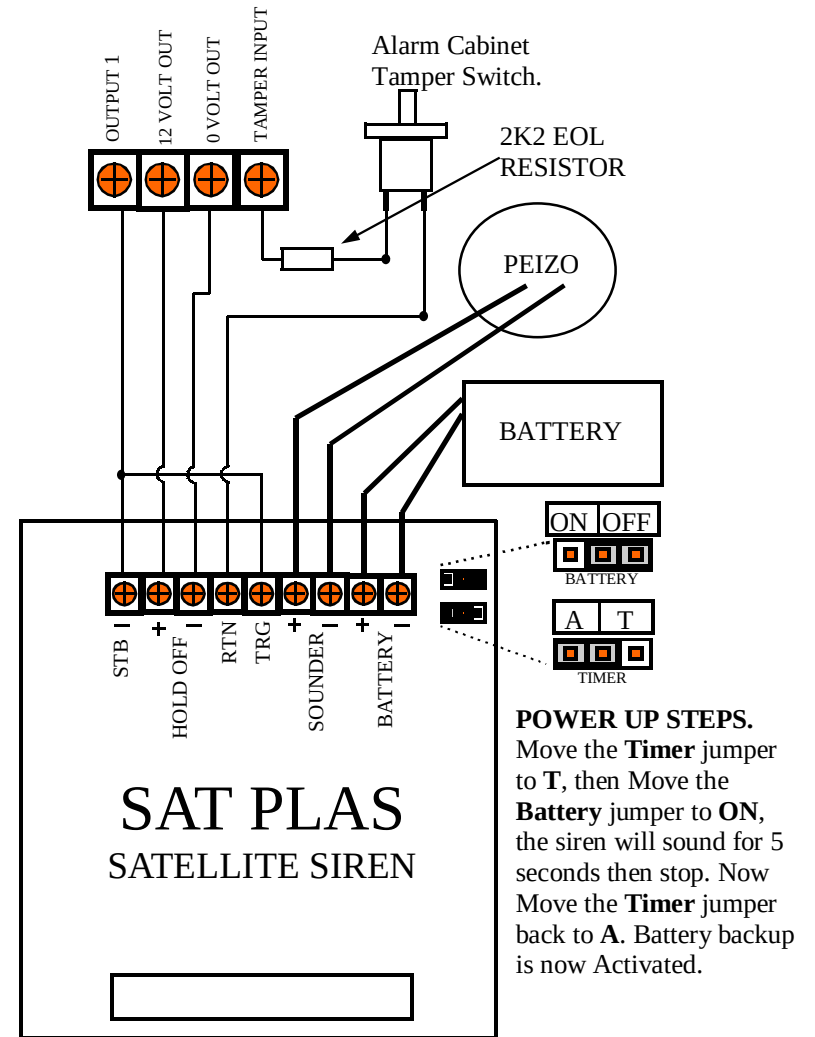


*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SAT-PLAS

6 CORE WIRING VERSION

ALERT OR ELITE CONTROL PANEL

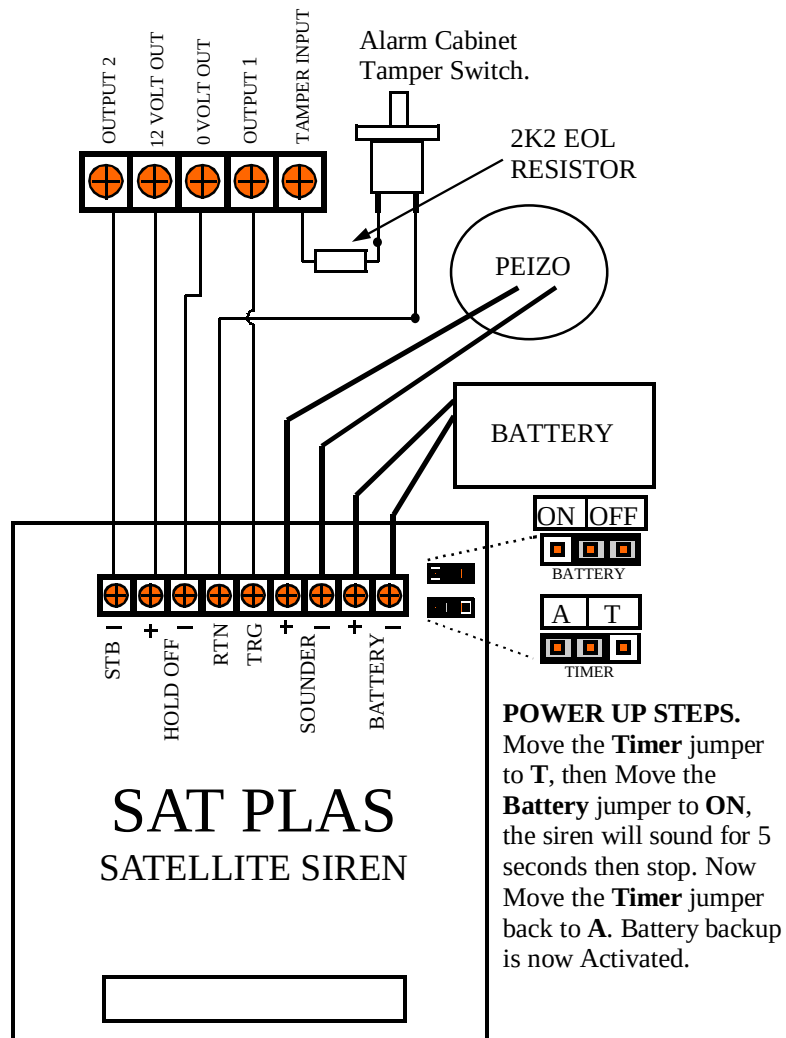

POWER UP STEPS.


Move the **Timer** jumper to T, then Move the **Battery** jumper to ON, the siren will sound for 5 seconds then stop. Now Move the **Timer** jumper back to A. Battery backup is now Activated.

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SS-1/BB & SS-3/BB

4 CORE WIRING VERSION

ALERT OR ELITE CONTROL PANEL

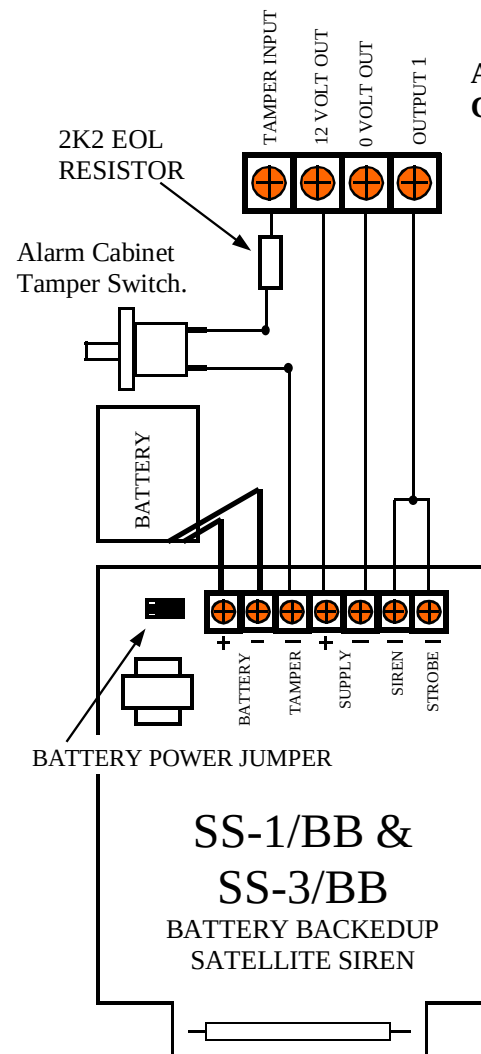


When you have finished wiring up the satellite and put power on it, don't forget to move the **Battery Power Jumper** to the ON position.

*TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER

SAT-TWIN


6 CORE WIRING VERSION

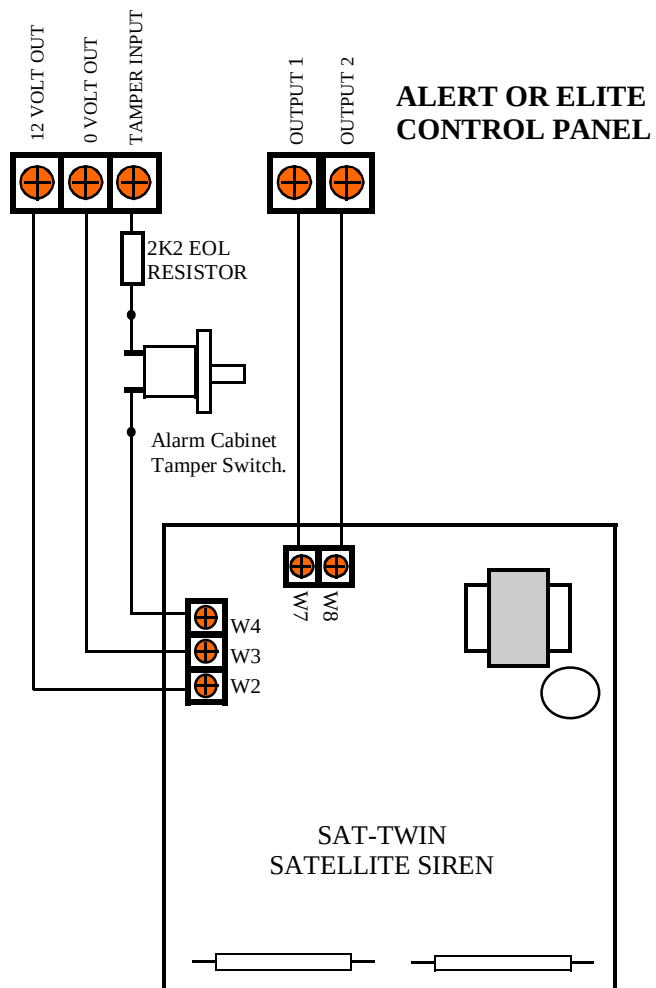

**TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER*

SAT-TWIN

4 CORE WIRING VERSION

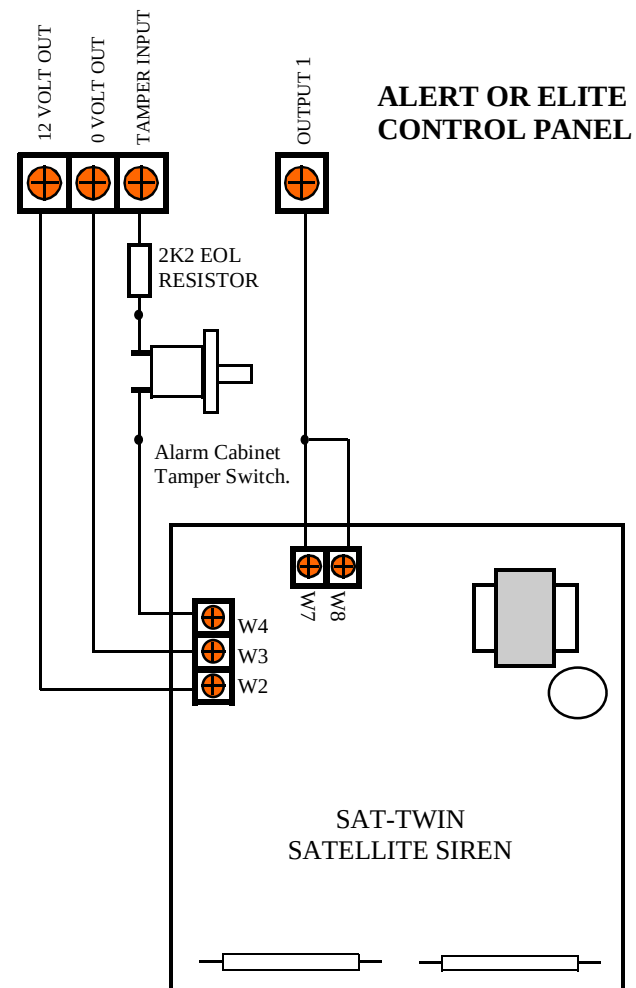

**TERMINALS ON PANEL NOT SHOWN IN CORRECT ORDER*