

Model 3000 & Access 4000

PROGRAMMING, APPLICATIONS AND REFERENCE MANUAL

P/No: 631022

FOR UPDATES:

Check the Website regularly for:

- New documents to be added to this manual.
- Updates and/or changes to existing documents.

<http://www.innerrange.com>

Current Document Revision numbers.

Revision number relates to the Control Module Firmware Version when the document was last changed.

e.g. No changes have been made to "Area List programming" (MENU, 2, 3, 1) since V3.0 release.

Section 0. Preamble	Sec 1. Intro	Sec 2. Summ	Sec 3. Mem.	Sec 4. Bas Prg.				Sec 8. Install.	Sec 9 Glossary
4.0	4.0	4.0	4.0	4.0					3.0
Sec 5. Applications	Contents	Anti-Pass	Batt Test	Camera	Defer	Interlock	Duress	Evnt Cnt	Holdup
	3.5	3.0	3.5	3.0	3.0	3.0	3.0	3.0	3.5
	HomAux	Latch Al	Lift	Lift HL	Rdr Area	Review	Siren	TimeAux	Usr Cnt
	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
	ZoneTst	ZoneMult							
	3.0	3.5							
Sec 6. Prog Reference	1. Info		3 Isolate			6 Spare			9 Control
	4.0		4.0			4.0			4.0
Menu, 2. Access	2, 1	2, 2			2, 5	2, 6			
	4.0	4.0			3.0	4.0			
Menu, 2, 3. Lists	2, 3, 1	2, 3, 2	2, 3, 3	2, 3, 4	2, 3, 5	2, 3, 6			
	3.0	3.0	3.0	3.0	3.0	4.0			
Menu, 2, 4. Groups	2, 4, 1	2, 4, 2	2, 4, 3						
	4.0	4.0	4.0						
Menu, 4. Testing	4, 1	4, 2	4, 3	4, 4	4, 5	4, 6	4, 7	4, 8	4, 9
	3.0	3.0	4.0	3.0	3.0	3.0	4.0	3.0	4.0
Menu, 5. Times	5, 1	5, 2	5, 3	5, 4	5, 5				
	3.0	4.0	3.0	4.0	3.0				
Menu, 7. Installer	7, 0 Inp	7, 1 Area				7, 6 Dr			7, 9 Lift
	4.0	4.0				4.0			3.0
Menu, 7, 2. Modules	7, 2, 1		7, 2, 3	7, 2, 4		7, 2, 6	7, 2, 7	7, 2, 8	7, 2, 9
	4.00		4.0	4.0		3.0	4.0	4.0	4.0
Menu, 7, 3. Comms	7, 3, 1	7, 3, 2	7, 3, 3						
	4.0	3.0	3.0						
Comms Tasks Contents	1 Mon	2 Ans	3 PCDir	4 IRfst	5 CID	6 EMS	7 ENet	8 Sectel	9 Print
4.0	3.0	4.0	3.0	4.0	4.0	3.0	3.0	3.0	3.0
10 Ext Modem	11 Inet	12 Acc	13 Poll	14 Pac	15 IRfB	16CidB	17GSM	18 SN	19 4+2
4.0	4.0	4.0	4.0	3.0	3.0	3.0	4.0	4.0	3.0
	21 Geo	22 8pin	23CBus	24 Ino					
			4.0	4.0					
Menu, 7, 5. System	7, 5, 1	7, 5, 2	7, 5, 3	7, 5, 4	7, 5, 5	7, 5, 6	7, 5, 7	7, 5, 8	7, 5, 9
	4.0	4.0	4.0	3.0	3.0	3.0	3.0	3.0	4.0
Menu, 7, 8. LAN	7, 8, 1	7, 8, 2		7, 8, 4					7, 8, 9
	3.0	3.0		3.0					3.0
Menu, 8. Service	8,1	8,2	8, 3	8, 4					
	4.0	4.0	3.0	3.0					
Section 7. Tables:	Contents	System Inputs	Review Mess.	CID Mess.	CID Standard	CID Map 1	CID Sch30	CID Sch19	CID SIMSII
	4.0	4.0	4.0	3.0	3.5	3.5	3.5	3.5	3.5
	CID Acc-1	CID Std II	CID Sch19B	Securitel					
	3.5		4.0	3.0					

Contents

Current Document Revision numbers	2
Disclaimer	4
Warranty	4
Inner Range Offices	4

System Overview and Introduction to Programming.

System Overview
Conventions and Abbreviations
System Information Menu
Programming via the LCD Terminal
The LAN system
Configuring the Model 3000/Access 4000 LAN
Model Options

Programming Summary

Memory Configurations

Introduction
Upgrading or re-configuring
Selection guide
Configurations

Basic Programming Guide

Getting Started
Alarm Processing
Module programming
Door programming
Basic Lift programming
User programming
Central Monitoring Station communications
Remote Access and Control
Miscellaneous Options

Applications Programming Guide

Programmer's Reference Section

Detailed information on every programming option presented in numerical order according to Menu Option number.

Tables

System Inputs
Review Messages
Contact ID Mapping options
Securitel Map
Blank Programming Sheets (on CD-ROM and Website only)

Installation and Troubleshooting

Glossary

Notes

Disclaimer

- 1) The manufacturer and/or its agents take no responsibility for any damage, financial loss or injury caused to any equipment, property or persons resulting from the correct or incorrect use of the Concept system and its peripherals. The purchaser assumes all responsibility in the use of the Concept system and its peripherals.
- 2) Whilst every effort has been made to ensure the accuracy of this manual, Inner Range Pty Ltd assumes no responsibility or liability for any errors or omissions.
Due to ongoing development the contents of this manual is subject to change without notice.

Warranty

Inner Range Pty Ltd is proud of the reputation it has gained in the provision of high quality electronic products. Exhaustive factory and field testing ensure that enhanced system programming features and additional hardware components operate as expected prior to their release to our customers. Extensive function testing is carried out on every Inner Range Concept product prior to it leaving the factory.

It is our intention to completely satisfy the requirements of our customers. To that end, Inner Range Pty Ltd stands behind its products with confidence. A Two Year Warranty accompanies every Inner Range Concept product. Should any Concept product fail to function as intended by the manufacturer within this period, it should be returned to the distributor and the fault or symptom detailed. Inner Range will, at its own discretion, repair or replace the product as soon as possible.

This Warranty does not cover product failures occurring wholly or in part as a result of misuse, malicious damage, accidental damage or acts of nature.

INNER RANGE OFFICES

Head Office (& Distribution Enquires):

Inner Range Pty Ltd.
24 Laser Drive, Rowville
Victoria. 3178. Australia
Telephone: (+61 3) 9753 3488 Facsimile: (+61 3) 9753 3499
email: enquiries@innerrange.com

Europe:

Inner Range (Europe) Ltd.
Unit 7 Richfield Place.
Richfield Avenue
Reading. Berks. RG1 8EQ United Kingdom
Telephone: +44 (0) 118 957 5055 Facsimile: +44 (0) 118 957 5088
email: barry@innerrange.com

Inner Range China

P.R.China
Guangzhou
Pan Fu Road
Yi Guo Hou Street. Number 1
Guang Qing Building. Room 201
Telephone: (86)-20-8136 7621 Facsimile: (86)-20-8136 3152
email: irchina@public.guangzhou.gd.cn
web: <http://ir.chinaalarm.com>