

3000 / Access 4000. Securitel / SpreadNet Interface Cable. P/N: 993035

This cable is designed to connect a Securitel Serial STU or C&K Systems SpreadNet Receiver to a Port on a 3000 / Access 4000 UART Interface board.

Before the Securitel/SpreadNet cable can be used, one of the following UART board options must be fitted to the Control Module:

993065 3000/4000 Single Port UART.


993066 3000/4000 Dual Port UART.

993068 3000/4000 Four Port UART.

If fitting the UART board follow the installation instructions carefully, ensuring that the Control Module is powered down and battery disconnected before the UART is fitted.

When programming a Comms Task (MENU, 7, 3, 1) for Securitel or SpreadNet formats, the correct UART Port number (1 to 4) must be selected and the Baud rate must be set to 9600.

CONNECTION DIAGRAM

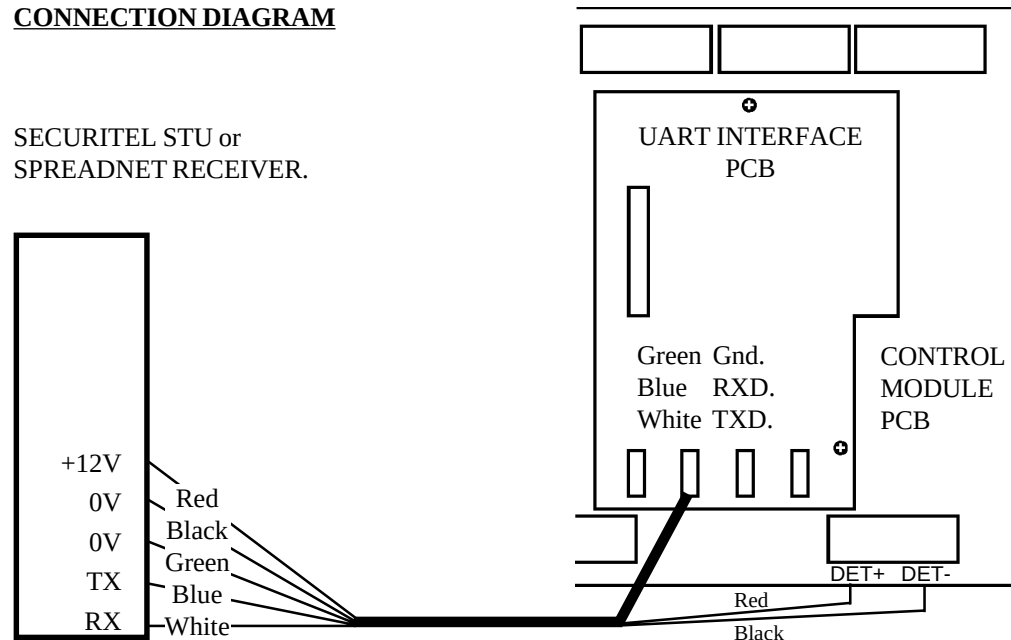

3000 / Access 4000. Securitel / SpreadNet Interface Cable. P/N: 993035

This cable is designed to connect a Securitel Serial STU or C&K Systems SpreadNet Receiver to a Port on a 3000 / Access 4000 UART Interface board.

Before the Securitel/SpreadNet cable can be used, one of the following UART board options must be fitted to the Control Module:

993065 3000/4000 Single Port UART.

993066 3000/4000 Dual Port UART.

993068 3000/4000 Four Port UART.

If fitting the UART board follow the installation instructions carefully, ensuring that the Control Module is powered down and battery disconnected before the UART is fitted.

When programming a Comms Task (MENU, 7, 3, 1) for Securitel or SpreadNet formats, the correct UART Port number (1 to 4) must be selected and the Baud rate must be set to 9600.

CONNECTION DIAGRAM

