

3000 / ACCESS 4000 V5.1

**T05. Contact ID
Map-1 Mapping Tables**

CONTACT ID Map 1 MAPPING					
Account No.	Event Code	Area No.	POINT	Description	Panel Input
	140	nn	001	Controller zone 1	C01:Z01
	140	nn	002	Controller zone 2	C01:Z02
			to	to	"
	140	nn	016	Controller zone 16	C01:Z16
	145	nn	017	Controller cabinet tamper	C01:S01
	145	nn	018	Controller internal siren tamper	C01:S02
	145	nn	019	Controller external siren tamper	C01:S03
	301	nn	020	Controller AC fail	C01:S04
	302	nn	021	Controller Low Battery	C01:S05
	140	nn	022	Controller Lan fuse tamper	C01:S06
	140	nn	023	Controller Detector fuse tamper	C01:S07
	143	nn	024	Controller Lan comms	C01:S08
	309	nn	025	Controller Battery test fail	C01:S09
	306	nn	026	Controller Checksum alteration	C01:S10
	305	nn	027	Controller system power on reset	C01:S11
	351	nn	028	Controller Phone line fault	C01:S12
	330	nn	029	Uart 1 fault	C01:S13
	330	nn	030	Uart 2 fault	C01:S14
	330	nn	031	Uart 3 fault	C01:S15
	330	nn	032	Uart 4 fault	C01:S16
	307	nn	033	Controller Self test fail	C01:S17
	602	nn	034	Controller Time report	C01:S18
	601	nn	035	Controller manual test report	C01:S19
	350	nn	036	Controller Comms backup	C01:S20
	354	nn	037	Controller Comms fail	C01:S21
	351	nn	038	Controller Phone	C01:S22
	140	nn	039	Controller Module substitution	C01:S23
	140	nn	040	PreArm1 Test Pass	C01:S24
	140	nn	041	PreArm1 Test Fail	C01:S25
	140	nn	042	PreArm2 Test Pass	C01:S26
	140	nn	043	PreArm2 Test Fail	C01:S27
	140	nn	044	Controller Request Service	C01:S28
	140	nn	045	Controller Intelligent Reader Problem	C01:S29
	140	nn	046	Controller System input 46	C01:S30
	140	nn	047	Controller System input 47	C01:S31
	140	nn	048	Controller System input 48	C01:S32
		nn	99	Unmappable event	
	140	nn	101	LCD Terminal 1 Zone 1	T01:Z01
	140	nn	102	LCD Terminal 1 Zone 2	T01:Z02
	145	nn	103	LCD Terminal 1 Cabinet tamper	T01:S01
	120	nn	104	LCD Terminal 1 Panic	T01:S02
	420	nn	105	LCD Terminal 1 Door forced	T01:S03
	420	nn	106	LCD Terminal 1 Door Held	T01:S04
	122	nn	107	LCD Terminal 1 Operator duress	T01:S05
	102	nn	108	LCD Terminal 1 Deadman	T01:S06
	421	nn	109	LCD Terminal 1 Too many tries	T01:S07
	143	nn	110	LCD Terminal 1 Lan comms status	T01:S08
				V	
				From LCD Terminal Number 1 to 9	
				V	
	140	nn	901	LCD Terminal 9 Zone 1	T09:Z01
	140	nn	902	LCD Terminal 9 Zone 2	T09:Z02
	145	nn	903	LCD Terminal 9 Cabinet tamper	T09:S01

	120	nn	904	LCD Terminal 9 Panic	T09:S02
	420	nn	905	LCD Terminal 9 Door forced	T09:S03
	420	nn	906	LCD Terminal 9 Door Held	T09:S04
	122	nn	907	LCD Terminal 9 Operator duress	T09:S05
	102	nn	908	LCD Terminal 9 Deadman	T09:S06
	421	nn	909	LCD Terminal 9 Too many tries	T09:S07
	143	nn	910	LCD Terminal 9 Lan comms status	T09:S08
	140	nn	111	Expander 1 Zone 1	B01:Z01
	140	nn	112	Expander 1 Zone 2	B01:Z02
			to	to	to
	140	nn	126	Expander 1 Zone 16	B01:Z16
	140	nn	99	Expander 1 Zone 17	B01:Z17
			to	to	to
	140	nn	99	Expander 1 Zone 32	B01:Z32
	145	nn	127	Expander 1 cabinet tamper	B01:S01
	145	nn	128	Expander 1 internal siren tampers	B01:S02
	145	nn	129	Expander 1 external siren tampers	B01:S03
	301	nn	130	Expander 1 AC fail	B01:S04
	302	nn	131	Expander 1 Battery Low	B01:S05
	140	nn	132	Expander 1 Lan fuse tamper	B01:S06
	140	nn	133	Expander 1 Detector fuse tamper	B01:S07
	143	nn	134	Expander 1 Lan comms status	B01:S08
	309	nn	135	Expander 1 Battery test fail	B01:S09
	306	nn	136	Expander 1 spare	B01:S10
				V	
	140	nn	137	Expander 2 Zone 1	B02:Z01
	140	nn	138	Expander 2 Zone 2	B02:Z02
			to	to	to
	140	nn	152	Expander 2 Zone 16	B02:Z16
	140	nn	99	Expander 2 Zone 17	B02:Z17
			to	to	to
	140	nn	99	Expander 2 Zone 32	B02:Z32
	145	nn	153	Expander 2 cabinet tamper	B02:S01
	145	nn	154	Expander 2 internal siren tampers	B02:S02
	145	nn	155	Expander 2 external siren tampers	B02:S03
	301	nn	156	Expander 2 AC fail	B02:S04
	302	nn	157	Expander 2 Battery Low	B02:S05
	140	nn	158	Expander 2 Lan fuse tamper	B02:S06
	140	nn	159	Expander 2 Detector fuse tamper	B02:S07
	143	nn	160	Expander 2 Lan comms status	B02:S08
	309	nn	161	Expander 2 Battery test fail	B02:S09
	306	nn	162	Expander 2 spare	B02:S10
				V	
				From Zone Expander 1 to 18	
				V	
	140	nn	911	Expander 17 Zone 1	B17:Z01
	140	nn	912	Expander 17 Zone 2	B17:Z02
			to	to	to
	140	nn	926	Expander 17 Zone 16	B17:Z16
	140	nn	99	Expander 17 Zone 17	B17:Z17
			to	to	to
	140	nn	99	Expander 17 Zone 32	B17:Z32
	145	nn	927	Expander 17 cabinet tamper	B17:S01
	145	nn	928	Expander 17 internal siren tampers	B17:S02
	145	nn	929	Expander 17 external siren tampers	B17:S03
	301	nn	930	Expander 17 AC fail	B17:S04
	302	nn	931	Expander 17 Battery Low	B17:S05

	140	nn	932	Expander 17 Lan fuse tamper	B17:S06
	140	nn	933	Expander 17 Detector fuse tamper	B17:S07
	143	nn	934	Expander 17 Lan comms status	B17:S08
	309	nn	935	Expander 17 Battery test fail	B17:S09
	306	nn	936	Expander 17 spare	B17:S10
				V	
	140	nn	937	Expander 18 Zone 1	B18:Z01
	140	nn	938	Expander 18 Zone 2	B18:Z02
			to	to	to
	140	nn	952	Expander 18 Zone 16	B18:Z16
	140	nn	99	Expander 18 Zone 17	B18:Z17
			to	to	to
	140	nn	99	Expander 18 Zone 32	B18:Z32
	145	nn	953	Expander 18 cabinet tamper	B18:S01
	145	nn	954	Expander 18 internal siren tampers	B18:S02
	145	nn	955	Expander 18 external siren tampers	B18:S03
	301	nn	956	Expander 18 AC fail	B18:S04
	302	nn	957	Expander 18 Battery Low	B18:S05
	140	nn	958	Expander 18 Lan fuse tamper	B18:S06
	140	nn	959	Expander 18 Detector fuse tamper	B18:S07
	143	nn	960	Expander 18 Lan comms status	B18:S08
	309	nn	961	Expander 18 Battery test fail	B18:S09
	306	nn	962	Expander 18 spare	B18:S10
	140	nn	111	Expander 1 Zone 1	E01:Z01
	140	nn	112	Expander 1 Zone 2	E01:Z02
			to	to	to
	140	nn	126	Expander 1 Zone 16	E01:Z16
	145	nn	127	Expander 1 cabinet tamper	E01:S01
	145	nn	128	Expander 1 internal siren tampers	E01:S02
	145	nn	129	Expander 1 external siren tampers	E01:S03
	301	nn	130	Expander 1 AC fail	E01:S04
	302	nn	131	Expander 1 Battery Low	E01:S05
	140	nn	132	Expander 1 Lan fuse tamper	E01:S06
	140	nn	133	Expander 1 Detector fuse tamper	E01:S07
	143	nn	134	Expander 1 Lan comms status	E01:S08
	309	nn	135	Expander 1 Battery test fail	E01:S09
	306	nn	136	Expander 1 spare	E01:S10
				V	
				From Zone Expander 1 to 9	
				V	
	140	nn	911	Expander 9 Zone 1	E09:Z01
	140	nn	912	Expander 9 Zone 2	E09:Z02
			to	to	to
	140	nn	926	Expander 9 Zone 16	E09:Z16
	145	nn	927	Expander 9 cabinet tamper	E09:S01
	145	nn	928	Expander 9 internal siren tampers	E09:S02
	145	nn	929	Expander 9 external siren tampers	E09:S03
	301	nn	930	Expander 9 AC fail	E09:S04
	302	nn	931	Expander 9 Battery Low	E09:S05
	140	nn	932	Expander 9 Lan fuse tamper	E09:S06
	140	nn	933	Expander 9 Detector fuse tamper	E09:S07
	143	nn	934	Expander 9 Lan comms status	E09:S08
	309	nn	935	Expander 9 Battery test fail	E09:S09
	306	nn	936	Expander 9 Spare	E09:S10
			99	From Expander 10 to 18 zones 1 to 16	Enn:Znn

	140	nn	111	Mini Expander 1 Zone 1	M01:Z01
	140	nn	112	Mini Expander 1 Zone 2	M01:Z02
			to	to	to
	140	nn	118	Mini Expander 1 Zone 8	M01:Z08
	302	nn	127	Mini Expander 1 Low Battery	M01:S01
	140	nn	128	Mini Expander 1 Zn1 Extra	M01:S02
	140	nn	129	Mini Expander 1 Zn2 Extra	M01:S03
	140	nn	130	Mini Expander 1 Zn3 Extra	M01:S04
	140	nn	131	Mini Expander 1 Zn4 Extra	M01:S05
	140	nn	132	Mini Expander 1 Zn5 Extra	M01:S06
	140	nn	133	Mini Expander 1 Zn6 Extra	M01:S07
	140	nn	134	Mini Expander 1 Zn7 Extra	M01:S08
	143	nn	135	Mini Expander 1 LAN Comms	M01:S09
				V	
				From Zone Expander 1 to 9	
				V	
	140	nn	911	Mini Expander 9 Zone 1	M09:Z01
	140	nn	912	Mini Expander 9 Zone 2	M09:Z02
			to	to	to
	140	nn	918	Mini Expander 9 Zone 8	M09:Z08
	302	nn	927	Mini Expander 9 Low Battery	M09:S01
	140	nn	928	Mini Expander 9 Zn1 Extra	M09:S02
	140	nn	929	Mini Expander 9 Zn2 Extra	M09:S03
	140	nn	930	Mini Expander 9 Zn3 Extra	M09:S04
	140	nn	931	Mini Expander 9 Zn4 Extra	M09:S05
	140	nn	932	Mini Expander 9 Zn5 Extra	M09:S06
	140	nn	933	Mini Expander 9 Zn6 Extra	M09:S07
	140	nn	934	Mini Expander 9 Zn7 Extra	M09:S08
	143	nn	935	Mini Expander 9 LAN Comms	M09:S09
			99	Mini Expander 10 to 18 zones 1 to 8	Mnn:Znn
	140	nn	163	Reader Module 1 Zone 1 Door 1	R01:Z01
	140	nn	164	Reader Module 1 Zone 2 REX Button	R01:Z02
	140	nn	165	Reader Module 1 Zone 3 REX Button	R01:Z03
	140	nn	166	Reader Module 1 Zone 4 Spare	R01:Z04
	140	nn	167	Reader Module 1 Zone 5	R01:Z05
	140	nn	168	Reader Module 1 Zone 6	R01:Z06
	140	nn	169	Reader Module 1 Zone 7	R01:Z07
	140	nn	170	Reader Module 1 Zone 8	R01:Z08
	145	nn	171	Reader Module 1 Cabinet Tamper	R01:S01
	302	nn	172	Reader Module 1 Low Battery	R01:S02
	140	nn	173	Reader Module 1 Door 1 Force	R01:S03
	140	nn	174	Reader Module 1 Door 1 Held	R01:S04
	140	nn	175	Reader Module 1 Door 2 Force	R01:S05
	140	nn	176	Reader Module 1 Door 2 Held	R01:S06
	140	nn	177	Reader Module 1 Illegal Card	R01:S07
	143	nn	178	Reader Module 1 Lan Comms Fail	R01:S08
				V	
				From Reader 1 to Reader 9	
				V	
	140	nn	963	Reader Module 9 Zone 1 Door 1	R09:Z01
	140	nn	964	Reader Module 9 Zone 2 REX Button	R09:Z02
	140	nn	965	Reader Module 9 Zone 3 REX Button	R09:Z03
	140	nn	966	Reader Module 9 Zone 4 Spare	R09:Z04
	140	nn	967	Reader Module 9 Zone 5	R09:Z05

	140	nn	968	Reader Module 9 Zone 6	R09:Z06
	140	nn	969	Reader Module 9 Zone 7	R09:Z07
	140	nn	970	Reader Module 9 Zone 8	R09:Z08
	145	nn	971	Reader Module 9 Cabinet Tamper	R09:S01
	302	nn	972	Reader Module 9 Low Battery	R09:S02
	140	nn	973	Reader Module 9 Door 1 Force	R09:S03
	140	nn	974	Reader Module 9 Door 1 Held	R09:S04
	140	nn	975	Reader Module 9 Door 2 Force	R09:S05
	140	nn	976	Reader Module 9 Door 2 Held	R09:S06
	140	nn	977	Reader Module 9 Illegal Card	R09:S07
	143	nn	978	Reader Module 9 Lan Comms Fail	R09:S08
	140	nn	179	SpreadNet 1 Zone 1	N01:Z01
	140	nn	180	SpreadNet 1 Zone 2	N01:Z02
			to	to	to
	140	nn	194	SpreadNet 1 Zone 16	N01:Z16
	353	nn	195	SpreadNet 1 Timeout	N01:S01
	356	nn	196	SpreadNet 1 Low Battery	N01:S02
	140	nn	197	SpreadNet 1 Spare	N01:S03
	140	nn	198	SpreadNet 1 Spare	N01:S04
				V	
				From SpreadNet Module 1 to 9	
				V	
	140	nn	979	SpreadNet 9 Zone 1	N9:Z01
	140	nn	980	SpreadNet 9 Zone 2	N9:Z02
			to	to	to
	140	nn	994	SpreadNet 9 Zone 16	N13:Z16
	353	nn	995	SpreadNet 9 Timeout	N13:S01
	356	nn	996	SpreadNet 9 Low Battery	N13:S02
	140	nn	997	SpreadNet 9 Spare	N13:S03
	140	nn	998	SpreadNet 9 Spare	N13:S04
	140	nn	111	Intell 4 Dr Access Mod Zone 1	I01:Z01
	140	nn	112	Intell 4 Dr Access Mod Zone 2	I01:Z02
				to	
	140	nn	126	Intell 4 Dr Acc Mod Zone 16	I01:Z16
	145	nn	127	Intell 4 Dr Acc Mod Lock Tamper D1	I01:S01
	145	nn	128	Intell 4 Dr Acc Mod Lock Tamper D2	I01:S02
	145	nn	129	Intell 4 Dr Acc Mod Lock Tamper D3	I01:S03
	145	nn	130	Intell 4 Dr Acc Mod Lock Tamper D4	I01:S04
	140	nn	131	Intell 4 Dr Acc Mod Door Forced D1	I01:S05
	140	nn	132	Intell 4 Dr Acc Mod Door Forced D2	I01:S06
	140	nn	133	Intell 4 Dr Acc Mod Door Forced D3	I01:S07
	140	nn	134	Intell 4 Dr Acc Mod Door Forced D4	I01:S08
	140	nn	135	Intell 4 Dr Acc Mod DOTL Door 1	I01:S09
	140	nn	136	Intell 4 Dr Acc Mod DOTL Door 2	I01:S10
	140	nn	137	Intell 4 Dr Acc Mod DOTL Door 3	I01:S11
	140	nn	138	Intell 4 Dr Acc Mod DOTL Door 4	I01:S12
	140	nn	139	Intell 4 Dr Acc Mod Invalid Card Door 1	I01:S13
	140	nn	140	Intell 4 Dr Acc Mod Invalid Card Door 2	I01:S14
	140	nn	141	Intell 4 Dr Acc Mod Invalid Card Door 3	I01:S15
	140	nn	142	Intell 4 Dr Acc Mod Invalid Card Door 4	I01:S16
	145	nn	143	Intell 4 Dr Acc Mod Cabinet Tamper	I01:S17
	140	nn	144	Intell 4 Dr Acc Mod Gen Lock Fault	I01:S18
	309	nn	145	Intell 4 Dr Acc Mod Battery Test Fail	I01:S19
	301	nn	146	Intell 4 Dr Acc Mod AC Fail	I01:S20
	302	nn	147	Intell 4 Dr Acc Mod Low Battery	I01:S21

	140	nn	148	Intell 4 Dr Acc Mod LAN Fuse	I01:S22
	140	nn	149	Intell 4 Dr Acc Mod Detector Fuse	I01:S23
	143	nn	150	Intell 4 Dr Acc Mod LAN Comms Fail	I01:S24
				V	
				From Intell 4Dr Acc Module 1 to 9	
				V	
	140	nn	911	Intell 4 Dr Access Mod Zone 1	I09:Z01
	140	nn	912	Intell 4 Dr Access Mod Zone 2	I09:Z02
				to	
	140	nn	926	Intell 4 Dr Acc Mod Zone 16	I09:Z16
	145	nn	927	Intell 4 Dr Acc Mod Lock Tamper D1	I09:S01
	145	nn	928	Intell 4 Dr Acc Mod Lock Tamper D2	I09:S02
	145	nn	929	Intell 4 Dr Acc Mod Lock Tamper D3	I09:S03
	145	nn	930	Intell 4 Dr Acc Mod Lock Tamper D4	I09:S04
	140	nn	931	Intell 4 Dr Acc Mod Door Forced D1	I09:S05
	140	nn	932	Intell 4 Dr Acc Mod Door Forced D2	I09:S06
	140	nn	933	Intell 4 Dr Acc Mod Door Forced D3	I09:S07
	140	nn	934	Intell 4 Dr Acc Mod Door Forced D4	I09:S08
	140	nn	935	Intell 4 Dr Acc Mod DOTL Door 1	I09:S09
	140	nn	936	Intell 4 Dr Acc Mod DOTL Door 2	I09:S10
	140	nn	937	Intell 4 Dr Acc Mod DOTL Door 3	I09:S11
	140	nn	938	Intell 4 Dr Acc Mod DOTL Door 4	I09:S12
	140	nn	939	Intell 4 Dr Acc Mod Invalid Card Door 1	I09:S13
	140	nn	940	Intell 4 Dr Acc Mod Invalid Card Door 2	I09:S14
	140	nn	941	Intell 4 Dr Acc Mod Invalid Card Door 3	I09:S15
	140	nn	942	Intell 4 Dr Acc Mod Invalid Card Door 4	I09:S16
	145	nn	943	Intell 4 Dr Acc Mod Cabinet Tamper	I09:S17
	140	nn	944	Intell 4 Dr Acc Mod Gen Lock Fault	I09:S18
	309	nn	945	Intell 4 Dr Acc Mod Battery Test Fail	I09:S19
	301	nn	946	Intell 4 Dr Acc Mod AC Fail	I09:S20
	302	nn	947	Intell 4 Dr Acc Mod Low Battery	I09:S21
	140	nn	948	Intell 4 Dr Acc Mod LAN Fuse	I09:S22
	140	nn	949	Intell 4 Dr Acc Mod Detector Fuse	I09:S23
	143	nn	950	Intell 4 Dr Acc Mod LAN Comms Fail	I09:S24
	140	nn	99	All Analogue Module Zone Inputs	Qnn:Znn
	145	nn	99	All Analogue Module Cabinet Tamper	Qnn:S01
	302	nn	99	All Analogue Module Low Volts	Qnn:S02
	143	nn	99	All Analogue Module LAN Comms	Qnn:S03
	140	nn	99	All LAN Pwr Supp Module Zone Inputs	Pnn:Znn
	145	nn	99	All LAN PS Module Cabinet Tamper	Pnn:S01
	301	nn	99	All LAN PS Module AC Fail	Pnn:S02
	302	nn	99	All LAN PS Module Low Batt	Pnn:S03
	140	nn	99	All LAN PS Module Batt Fail	Pnn:S04
	140	nn	99	All LAN PS Module Detector Fuse	Pnn:S05
	140	nn	99	All LAN PS Module LAN Fuse	Pnn:S06
	140	nn	99	All LAN PS Module Batt Fuse	Pnn:S07
	140	nn	99	All LAN PS Module Aux 2 Fuse	Pnn:S08
	145	nn	99	All LAN PS Module Aux 2 Tamper	Pnn:S09
	140	nn	99	All LAN PS Module Det Over-current	Pnn:S10
	140	nn	99	All LAN PS Module Batt Over-current	Pnn:S11
	140	nn	99	All LAN PS Module Over Volts	Pnn:S12
	140	nn	99	All LAN PS Module Low Volts	Pnn:S13
	330	nn	99	All LAN PS Module Slave Fail	Pnn:S14
	309	nn	99	All LAN PS Module Batt Test Fail	Pnn:S15
	143	nn	99	All LAN PS Module LAN Comms	Pnn:S16

	140	nn	179	RF Expander Module Zone 1	F01:Z01
	140	nn	180	RF Expander Module Zone 2	F01:Z02
			to	to	to
	140	nn	194	RF Expander Module Zone 16	F01:Z16
	140	nn	99	RF Expander Module Zone 17 to 32	F01:Znn
	145	nn	195	RF Exp Module Cabinet Tamper	F01:S01
	302	nn	196	RF Exp Module Low Volts	F01:S02
	384	nn	197	RF Exp Module Tx Low Batt	F01:S03
	381	nn	198	RF Exp Module Tx Poll Fail	F01:S04
	344	nn	199	RF Exp Module Tx Jam	F01:S05
	143	nn	200	RF Exp Module LAN Comms	F01:S06
				V	
				From RF Exp Module 1 to 9	
				V	
	140	nn	179	RF Expander Module Zone 1	F09:Z01
	140	nn	180	RF Expander Module Zone 2	F09:Z02
			to	to	to
	140	nn	194	RF Expander Module Zone 16	F09:Z16
	140	nn	99	RF Expander Module Zone 17 to 32	F09:Znn
	145	nn	195	RF Exp Module Cabinet Tamper	F09:S01
	302	nn	196	RF Exp Module Low Volts	F09:S02
	384	nn	197	RF Exp Module Tx Low Batt	F09:S03
	381	nn	198	RF Exp Module Tx Poll Fail	F09:S04
	344	nn	199	RF Exp Module Tx Jam	F09:S05
	143	nn	200	RF Exp Module LAN Comms	F09:S06
				OPEN / CLOSE	
	402	nn	001	Open/Close for Area nn - User 00001	na
			to	to	
	402	nn	900	Open/Close for Area nn - User 00900	na
	403	nn	901	Open/Close for System	na
	403	nn	902	Open/Close for Time Zone	na
	409	nn	903	Open/Close for Function Zone	na
	402	nn	999	Open/Close for Users > 00900	na
			00	General Area Open/Close	na
		01 - 98	01 to 98	Area 001-098 Open/Close	na
		99 - 250	99	Areas > 99 (99 to 250)	na
				"nn" = Area Number, "na"=not applicable	