


Wiring the MQ Series communicators to Paradox SP5500

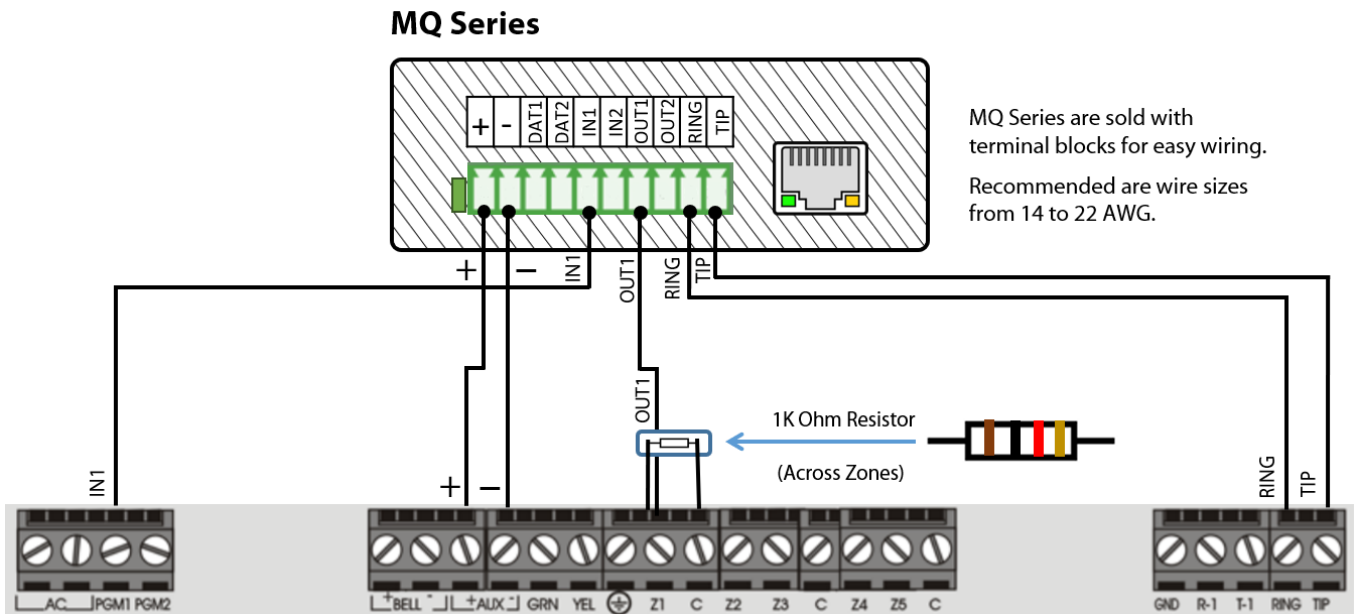

Programming the Paradox SP5500 Alarm Panel via the Keypad (1)

Enable Contact ID reporting:

LED indication on Keypad	Keypad Entry	Action Description
	Enter, 0000	To enter programming mode.
Arm and Stay blink	800	To go to dialer options toggle menu.
Arm, Stay – lit	1, 2, 3, 4, 8, 6	Press the respective buttons until 1,2,3,4,8 are OFF/Dim, 6 is ON/Lit (1 and 2 OFF – disable TLM, 3 OFF – disable switch to pulse, 4 OFF – disable alternate dial, 8 OFF – disable to activate dialer, 6 ON – enable DTMF dialing).
Arm, Stay – lit	Enter	To go to 801 toggle menu.
Arm, Stay – lit	1, 5	Press 1 and 5 until 1 is OFF/Dim (Always report system disarming) and 5 is ON/Lit (Set Contact ID defaults).
Arm, Stay – lit	Enter	To go to 802 toggle menu.
Arm, Stay – lit	1, 2, 5, 6	Press the respective buttons until 1 and 5 are ON/Lit and 2,6 are OFF/Dim (1 On, 2 OFF – Call phone number 1 for Arm/Disarm reporting codes) and (5 ON, 6 Off – Call phone number 1 for Alarm/Restore reporting codes).
Arm, Stay – lit	Enter	To go to 803 toggle menu.
Arm, Stay – lit	1, 2, 5, 6	Press the respective buttons until 1 and 5 are ON/Lit and 2,6 are OFF/Dim (1 On, 2 OFF – Call phone number 1 for Tamper/Restore report codes) and (5 ON, 6 Off – Call phone number 1 for Trouble/Restore reporting codes).
Arm, Stay – lit	Enter	To go to 804 toggle menu.
Arm, Stay – lit	1, 2	Press 1 and 2 until 1 is ON and 2 is OFF (Call phone number 1 for special report codes).
Arm, Stay – lit	Enter	To go to 805 toggle menu.
Arm, Stay – lit	1, 2, 5, 6	Press the respective buttons until 1,2 are OFF/Dim (GSM reporting is always set to landline/ring & tip) 5,6 are OFF/Dim (disable GSM service trouble feedback).
Arm, Stay – lit	Enter, Clear	To go back to the main programming menu.
Arm and Stay blink	810	To go to 810 toggle menu.
Arm, Stay – lit	4, 4	To set Ademco Contact ID reporting format for Phone 1 and 2.
Arm and Stay blink	811	To go to 811 section – Partition 1 account number.
Arm, Stay – lit	1234	Enter the desired account number (1234 is just an example).
Arm, Stay – lit	Clear	To go back to the main programming menu.
Arm and Stay blink	815	To go to 815 section – Monitoring station phone number 1.
Arm, Stay – lit	123456	Enter the desired phone number (123456 is just an example).
Arm, Stay – lit	Enter, Clear	To exit programming mode.

See the next page for Enable keyswitch arm/disarm and status output.

Programming the Paradox SP5500 Alarm Panel via the Keypad (2)

Enable keyswitch arm/disarm and status output:

LED indication on Keypad	Keypad Entry	Action Description
	Enter, 0000	To enter programming mode.
Arm and Stay blink	001	To go to Program Zone 1 menu.
Arm, Stay – lit	26, 1	26 - to choose Momentary Keyswitch, 1 – to assign the zone to Partition 1.
Arm, Stay – lit	Enter, Enter, Clear	To go back to the main programming menu.
Arm and Stay blink	706	To go to General Zone Option 2.
Arm, Stay – lit	2, Enter	2 Should be ON/Lit to enable EOL resistors, Enter to save and go back.
Arm and Stay blink	220	To program PGM 1 activation event.
Arm, Stay – lit	02, 12, 01	02 to go to event group 02 (Partition status), 12 to choose ARM partition, 01 to choose Partition 1.
Arm, Stay – lit	Clear	To go back to the main programming menu.
Arm and Stay blink	221	To program PGM 1 deactivation event.
Arm, Stay – lit	02, 11, 01	02 to go to event group 02 (Partition status), 11 to choose DISARM partition, 01 to choose Partition 1.
Arm, Stay – lit	Clear	To go back to the main programming menu.
Arm and Stay blink	281	To go to PGM1 output delay.
Arm, Stay – lit	000, Enter	To disable PGM1 output delay, Enter to save.
Arm, Stay – lit	Clear	To go back to the main programming menu.
Arm and Stay blink	261	To go to PGM1 options toggle section.
Arm, Stay – lit	2, Enter	2 Must be OFF/Dim (PGM state is normally open), Enter to save.
Arm, Stay – lit	Clear, Clear	To exit programming mode.