

ELITE REMOTE KEYPAD

Elite

● 1	● 5	Armed	Mains (0)
● 2	● 6	Memory	Battery (9)
● 3	● 7	Exclude	Tamper
● 4	● 8	Program	Line
●	●	Aux	Control

Elite LED Keypad Window Layout

When the Elite is displaying codes and address values in program mode it may be necessary to display the 9 and 0 digits. As there are no Zone indicators for 9 and 0 the Mains and Battery indicators are used.

ie. When displaying values in program mode
Mains = 0 and Battery = 9

LIGHT	OFF	ON STEADY	FLASHING
BATTERY		Normal	Battery Low
MAINS		Normal	Mains Power Off
ARMED	Disarmed	Full Armed	Monitor Mode
MEMORY	Normal	Memory Display	New Event to View
EXCLUDE	Normal	Exclude Mode	Zone(s) Excluded
PROGRAM	Run Mode	Client Mode	Installer Mode
TAMPER	Normal	Tamper Violated	Tamper Alarm
LINE	Normal	Communicating	Line Fail
CONTROL	Control Opt Off	Control Opt On	
ZONES 1-8	Zone Secure	Zone Violated	Zone in Alarm