
PROGRAMMING Cont.

TO CLEAR PROGRAM INFORMATION (From Install Mode Only)

There are five options available for clearing program information (Reset to defaults). These are detailed on page 24.

eg. To reset User Codes 1-16 (P 90 E P 90 E)

Press <PROGRAM> - 90 - <ENTER> - <PROGRAM> - 90 - <ENTER>
3 beeps - Program light flashing

eg. To reset everything - including User codes (P 91 E P 91 E)

Press <PROGRAM> - 91 - <ENTER> - <PROGRAM> - 91 - <ENTER>
3 beeps - Program light flashing

After the system configuration and User Codes have been reset all values, options & Codes will be set to the values shown in the Program Option Summary as defaults. These value & option selections have been chosen as the most common set-up for the majority of systems.

TO EXIT PROGRAM MODES

To exit program modes when you have finished programming:

Press <PROGRAM> - <ENTER>
Program light goes out

The panel is now back in Run Mode, any program changes you have made will have replaced previous values and be in effect.

KEYPAD TAMPER

A wrong code or Keypad Tamper alarm is generated by the Elite after 4 consecutive invalid code entries. The controller will not "Lock-Out" the keypad at this point but simply create an alarm condition as determined by the tamper alarm options (P42E etc). Entry of a valid user code will reset the Keypad Tamper alarm.

