
OPTION DESCRIPTIONS

CODES (P1E to P16E)

There are 16 codes available in the Elite, 15 user codes and 1 Install code. The User Codes are located in addresses 1-15. Code 1 is the Master code used to enter Program Mode. The Install Code is stored at address 16 and is used to move from Client Program Mode up to Installer Program Mode.

Codes may be varied in length from 3 to 8 digits.

To program a User Code you must first select the address for the code then enter the code twice separated by the ENTER key.

eg. P 1 E 1234 E 1234 E
3 beeps - program light flashing

In this example we have set Code 1 (master code) to be 1234. The two entries of the code must match before they can be accepted. This feature ensures the code has been entered correctly and you know the code you have entered.

eg. P 5 E 5678 E 5678 E
3 beeps - program light flashing

In this example we have set code 5 to be 5678

To replace a code simply enter the new code in the same address as the old code. This will overwrite the previous code.

To clear or delete a code simply enter a 000 at the address where the old code is stored.

eg. P 3 E 000 E 000 E
3 beeps - Program light flashing

Entering codes is the only program option where it is necessary to enter the value twice. Like other program addresses, stored codes will be flashed back to you.

When flashing back codes and values Zone indicators 1-8 are used to indicate digits 1-8. The digit 9 is indicated by the MAINS light and 0 is indicated by the BATTERY light.