
ZONE TYPE ASSIGNMENT

Within the program options there are provisions to define an input zone to behave in a certain manner when the panel is set & unset. These options are;

Isolatable Zones

Instant

Delay 1

Delay 2

Handover

2 Trigger

24Hr

Monitor zones

Day Zones

Siren Lockout Zones

Siren Lockout Zones & Two Trigger Zones are mutually exclusive. That is, you cannot have programmed a zone as Two Trigger and Siren Lockout. Only one option will be accepted.

The way a zone is defined determines the way it will behave according to a preset group of parameters.

Once a zone has been assigned a function (instant, delay 1, delay 2, handover) it's function can be changed by simply re-assigning the zone to a different address. eg. P18E1E assigns zone 1 as delay, if you wished to make zone 1 instant program P18E1E and it goes from delay to instant.

ISOLATABLE ZONES (P17E)

Zones appearing at this address are able to be isolated or excluded manually by users if necessary. If a zone is removed from this address it cannot be manually excluded at all. This option is used to protect the integrity of high risk zones such as panic alarms or smoke detectors etc. (LED on = can be Excluded).

INSTANT ZONES (P18E)

Zones defined as instant have no entry delay and will produce an alarm output immediately they are triggered. It should be noted that an exit as defined at P54E is applied to all zones on setting the panel.