

ALARM RESET TIME TO OUTPUTS 1-5 (P49E)

This option is used to determine which out of the 5 outputs are resetting & which are latching. As default outputs 1-4 are resetting. If you enter an output number at this address it will become resetting and follow the time set by the value stored at P57E.

ALARM OUTPUT DELAY TIME TO OUTPUTS 1-5 (P50E)

This option may be used to delay an output from operating for a time period determined by the value set at P58E. This feature can be used to alert patrol response via a dialler before operating the audibles.

MOMENTARY OUTPUT TO OUTPUTS 1-5 (P51E)

Outputs assigned to this address will produce momentary outputs when operated. The output duration is determined by the value set at P59E.

KEYSWITCH CHIRPS TO OUTPUTS 1-5 (P52E)

When selected, the programmed outputs will give 3 chirps on Arming and 1 beep on Disarming when using the Keyswitch input.

EXIT BEEPS TO OUTPUTS 1-5 (P53E)

Outputs assigned to this address will change state momentarily in sync with the exit beeps produced at the Elite keypads.

EXIT DELAY TIME (P54E)

The value set at this address determines the length of the EXIT Delay. Values from 1-99 seconds are valid.

ENTRY 1 DELAY (P55E)

The value set at this address determines the length of the ENTRY 1 Delay. Values from 1-99 seconds are valid.

ENTRY 2 DELAY (P56E)

The value set at this address determines the length of the ENTRY 2 Delay. Values from 1-99 seconds are valid.