

COMMUNICATOR OPTIONS

INTRODUCTION

The Elite control dialler communicates all of it's alarm information via a standard telephone line to either a central monitoring station using Academic Contact ID format or to a home using one of the custom non-receiver type formats.

Immediately disconnect the dialler from the Telecom Network should it become physically or electronically damaged and arrange for it's repair before reconnecting it in the Telecom Network.

Should the Elite control panel require relocation the Telecom connection must be disconnected before the power is disconnected. Similarly when reconnecting the dialler, it is necessary to power up the Elite before connecting the dialler to the Telecom Network.

Connection to the Telecom network should be made in accordance with Access Standards Newsletter #65 dated November 1993. An example of this connection method is shown below.

Line Termination Resistor
Demarcation Point

*NOTE: Withdrawing the plug shorts pin 1 to 4
and pin 5 to 8*

