
CONTENTS

INTRODUCTION	5
PACKAGE CONTENTS	5
ELITE CABINET DETAILS & MOUNTING	6
INPUTS	7
OUTPUTS	8
WIRING CONFIGURATION DIAGRAM	9
ELITE REMOTE KEYPAD	10
Visual Indications	10
Functions	11
Installation	12
PROGRAMMING	13
Access to Programming on power up	13
Access to Programming from run mode	13
How to program	13
To clear Program Information	14
To Exit Program Modes	14
Keypad Tamper	14
OPTION DESCRIPTIONS	15
Codes	15
Zone Type Assignment	16
Isolatable Zones	16
Instant Zones	16
Delay 1 Zones	17
Delay 2 Zones	17
Handover Zones	17
Double Trigger	17
24Hr Zones	18
Monitor Zones	18
Day Zones	18
Siren Lockout Zones	18
Miscellaneous Options	18
Control Options	19
Invert Outputs 1-8	20
Invert Output 9	20
Zones to Output 1	21
Zones to Outputs 2 - 5	21
Signals to Outputs 6 - 9	21
Zones to keypad Piezos	21
Signals to keypad Piezos	21
Tamper to Outputs 1 - 5	22
Day Mode Alarms to Outputs 1 - 5	22
Monitor Mode Alarms to Outputs 1 - 5	22