

ACCOUNT CODE (P105E)

The 4 digit monitoring account code is programmed at this address.
Note the default code is 0000

SET DIALLING OPTIONS (P108E)

This option sets the way the communicator selects which telephone numbers to dial and in which order.

- 1 = Use only phone number 1
- 2 = Alternate between 1 & 2
- 3 = Sequentially diall all 4 numbers until kiss-off is detected
- 4 = Spare
- 5 = Spare
- 6 = Spare
- 7 = Spare
- 8 = Spare

CONTACT ID CODE FOR ZONES 1-8 (P121E - P128E)

The codes reported by the communicator for zone ACTIVATIONS are set at these addresses. The default code is 130 - Burglary. Other codes may be entered as required. The 3 digit zone identifier is automatically sent by the dialler

CONTACT ID CODE FOR EXCLUDES ON ZONES 1-8 (P129E - P136E)

The codes reported by the communicator for zone EXCLUDES are set at these addresses. The default code is 570 - Zone Exclude. Other codes may be entered as required.

CONTACT ID CODE FOR SET / UNSET Default 401 (P137E)

CONTACT ID CODE FOR K/SWITCH SET/UNSET Default 409 (P138E)

CONTACT ID CODE FOR TAMPER Default 137 (P139E)

CONTACT ID CODE FOR KEYPAD PANIC Default 120 (P140E)

CONTACT ID CODE FOR KEYPAD TAMPER Default 137 (P141E)

REPORT ZONE ACTIVATIONS (P149E)

The address lets you set which zones will report alarms when activated. Each zone can be set individually.