

SEND MULTIPLE ZONE ALARMS (P150E)

This option selects which zone will send multiple activation signals. Zones can be selected individually as required. Note the default is all 8 zones send multiple activations.

MISCELLANEOUS SEND OPTIONS 1 (P151E)

This address sets a number of miscellaneous communicator options as listed below;

1 = Send zone restores	Default on
2 = Send zone excludes	Default on
3 = Send test signals	Default on
4 = Send Tamper	Default on
5 = Send Battery Low	Default on
6 = Send Mains Fail	Default on
7 = Send Keypad Panic	Default on
8 = Send Keypad Tamper	Default on

MISCELLANEOUS SEND OPTIONS 2 (P152E)

This address sets a second group of miscellaneous communicator options as listed below;

1 = Send Duress	Default off
2 = Send Set / Unset	Default on
3 = Send unset only after an activation	Default off
4 = Keypad Listen-in inhibit	Default off
5 = Enable voice dialler	Default off
6 = Enable Communicator	Default off
7 = Installer Lockout	Default off

* In order for the "Send unset only after activation" option to function correctly, the "Send restores" option at address P151 must be OFF.

! In order for the Voice Dialler to function correctly the "Send restores" option and the "Send test calls" options, at address P151, must both be set to OFF. Both options 5 & 6 must be on at address