

MAINS FAIL REPORT DELAY(P153E)

The value, in minutes, set at this address determines how long the mains fail must exist before the communicator will send a report. The range is from 1-99 min. Default is 1

TIME BETWEEN TEST CALLS (P154E)

This address sets the time in hours between test calls. If you want to send a test once a day you would set the value of this address to be 24

TIME TO FIRST TEST CALL (P155E)

The value at this address determines how long it will be before the first test call is sent. The timer starts running once the panel has been set and unset after exiting program mode. This means the timer will not start after the value has been entered at this address *until* you exit program mode and set then unset the panel.

Every time addresses P154 or P155 are changed you must set then unset the panel to restart this timer.

DEFAULT CONTACT ID CODE SUMMARY

Code Set / Unset	401 plus user code number
Shortcut Set / Unset	401 plus user 016
Keyswitch Set / Unset	409 plus extn 000
Zone Activation	130 plus zone number
Zone Exclude	570 plus zone number
Device Tamper	137 plus extn 001
Keypad Tamper	137 plus extn 002
Keypad Panic	120 plus extn 001
Duress	121 plus extn 003
Battery Low	302 plus extn 000
Mains Fail	301 plus extn 000
Test Call	602 plus extn 000