
PROGRAM OPTION SUMMARY

ADDRESS	OPTION	PAGE #
CLIENT & INSTALLER ACCESS		
P1E	Access Code # 1 Master Code (Default 123)	Page 15
P2E	Access Code # 2	Page 15
P3E	Access Code # 3	Page 15
P4E	Access Code # 4	Page 15
P5E	Access Code # 5	Page 15
P6E	Access Code # 6	Page 15
P7E	Access Code # 7	Page 15
P8E	Access Code # 8	Page 15
P9E	Access Code # 9	Page 15
P10E	Access Code # 10	Page 15
P11E	Access Code # 11	Page 15
P12E	Access Code # 12	Page 15
P13E	Access Code # 13	Page 15
P14E	Access Code # 14	Page 15
P15E	Access Code # 15	Page 15
INSTALLER ACCESS ONLY		
P16E	Installer Code (Default 000000)	Page 15
P17E	Isolatable Zones (Default 1-8)	Page 16
P18E	Instant Zones (Default 3-8)	Page 16
P19E	Delay 1 Zones (Default 1)	Page 17
P20E	Delay 2 Zones (Default none)	Page 17
P21E	Handover Zones (Default 2)	Page 17
P22E	Two Trigger Zones (Default none)	Page 17
P23E	24Hr Zones (Default none)	Page 18
P24E	Moment Mode Zones (Default 1-4)	Page 18
P25E	Day Zones (Default none)	Page 18
P26E	Siren Lockout Zones (Default none)	Page 18
P27E	Miscellaneous Options (Default 123&6)	Page 18
	1 = Entry Beeps	Page 19
	2 = Exit Beeps	Page 19
	3 = Keyswitch Arm/Monitor Mode	Page 19
	4 = LED Timeout	Page 19
	5 = Exit Delay X 10	Page 19
	6 = Auto Exclude	Page 19
	7 = Disable Single Button Disarm	Page 19
	8 = Disable Single Button Monitor on port # 1	Page 19