

P88E	Radio PIR Zone 8	Page 27
P89E	Enable Radio PIR Zones 1 - 8	Page 27
P90E	Reset User Codes to Default	Page 24
P91E	Reset ALL Panel Defaults incl Dialler & Radio	Page 24
P92E	Reset Dialler to Default	Page 24
P93E	Reset Radio to Default	Page 24
P94E	Clear Event Memory	Page 24

COMMUNICATOR PROGRAMMING

P101E	Telephone number 1 (16 digit max)	Page 30
P102E	Telephone number 2	
P103E	Telephone number 3	
P104E	Telephone number 4	
P105E	Monitoring Account code 1 (4 digit)	Page 31
P106E	Dial options (Default 1)	Page 31
	1 = Use Phone number 1 only	
	2 = Alternate reporting (Numbers 1 & 2)	
	3 = All 4 numbers are used to report alarm	
P121E	Zone 1 Alarm ____ (Default 130)	Page 31
P122E	Zone 2 Alarm ____ (Default 130)	
P123E	Zone 3 Alarm ____ (Default 130)	
P124E	Zone 4 Alarm ____ (Default 130)	
P125E	Zone 5 Alarm ____ (Default 130)	
P126E	Zone 6 Alarm ____ (Default 130)	
P127E	Zone 7 Alarm ____ (Default 130)	
P128E	Zone 8 Alarm ____ (Default 130)	
P129E	Zone 1 Exclude ____ (Default 570)	Page 31
P130E	Zone 2 Exclude ____ (Default 570)	
P131E	Zone 3 Exclude ____ (Default 570)	
P132E	Zone 4 Exclude ____ (Default 570)	
P133E	Zone 5 Exclude ____ (Default 570)	
P134E	Zone 6 Exclude ____ (Default 570)	
P135E	Zone 7 Exclude ____ (Default 570)	
P136E	Zone 8 Exclude ____ (Default 570)	
P137E	Set / Unset code ____ (Default 401)	Page 31
P138E	Keyswitch Set / Unset ID code ____ (Default 409)	
P139E	Tamper Alarm ID code ____ (Default 137)	Page 31
P140E	Keypad Panic ID code ____ (Default 120)	Page 31
P141E	Keypad Tamper ID code ____ (Default 137)	Page 31
P149E	Report Zone activation	Page 31
P150E	Multiple Zone Activations (Default ALL)	Page 32