

Panic to Outputs 1 - 5	22
Control Functions to Outputs 1 - 5	22
2 Second Autoexclude Warning to Outputs 1 - 5	22
Smoke Reset Pulse to Outputs 1 - 5	22
Alarm Reset Time to Outputs 1 - 5	23
Alarm Delay On Time to Outputs 1 - 5	23
Momentary Output to Outputs 1 - 5	23
Keyswitch Chirps to Outputs 1 - 5	23
Exit Beeps to Outputs 1 - 5	23
Exit Delay Time	23
Entry Delay 1 Time	23
Entry Delay 2 Time	23
Alarm Reset Time	24
Alarm Delay On Time	24
Momentary Output Time Value	24
2 Trigger Time Window	24
Bypass Digit	24
Flash to Outputs 1-5	24
Reset Codes only to Factory Defaults	24
Reset All to Factory Defaults - Incl Codes, Radio & Dialer	24
Reset Dialer to Defaults	24
Reset Radio to Defaults	24
Clear Event Memory Buffer	24
RADIO OPTIONS	25
Introduction	25
RADIO PROGRAM OPTIONS	25
Transmitter Type	25
Radio User Options	28
Enrol Radio PIR's to Zones 1-8	27
Unenrol Radio Zones 1-8	27
Radio Test Pin	27
COMMUNICATOR	29
Introduction	29
Program Options	30
Installer Lockout	32
DEFAULT CONTACT ID CODES SUMMARY	33
SPECIFICATIONS	34
PROGRAMMING OPTION SUMMARY	35
OPERATING INSTRUCTIONS	40

