

OPERATING INSTRUCTIONS

ARMING THE PANEL - Press the <Arm> Button or enter a valid code and press the <Enter> button. If successful the Armed light will come on and the Exit Delay will start.

DISARMING THE PANEL - Enter a valid code and press the <Enter> button. If successful the Armed light will go off. If the Exit delay has not expired the panel may be disarmed by pressing the <Arm> button.

EXCLUDING ZONES - Individual zones may be Excluded or Isolated by the users if necessary. This function lets you Arm the panel and leave out a faulty zone if required. Zones may only be excluded during the Exit delay time. To exclude a zone, for example zone 6, you must first arm the panel in the normal way, ie press the <Arm> button. While the Exit delay is running press the <Exclude> button then the <Enter> button. The Exclude light will come on steady. Now enter the faulty zone number and press <enter>. The keypad will give 3 short beeps and the Exclude light will flash. At the end of the Exit delay the Excluded zones will be loaded to the event memory.

When the panel is Disarmed, the Excluded zone will be reinstated and become active the next time the panel is Armed in the normal way.

MONITOR MODE - Monitor mode allows you to partially Arm the system by automatically excluding certain pre-programmed zones for you. To turn Monitor Mode on press the <Monitor> button. The Armed light will flash to indicate Monitor Mode is active. To turn Monitor Mode off, press the <Monitor> button again or enter a valid code and press <Enter> If you are not using a "quick monitor" keypad.

MEMORY MODE - The panel holds the last 20 alarm events in a memory for you to view later. To view these events press the <MEMORY> button then the <Enter> button. The last 20 alarm events will be flashed out on the keypad with beeps separating them.