



ADDING 1 SMOKE DETECTOR TO AN A8D-PP KIT

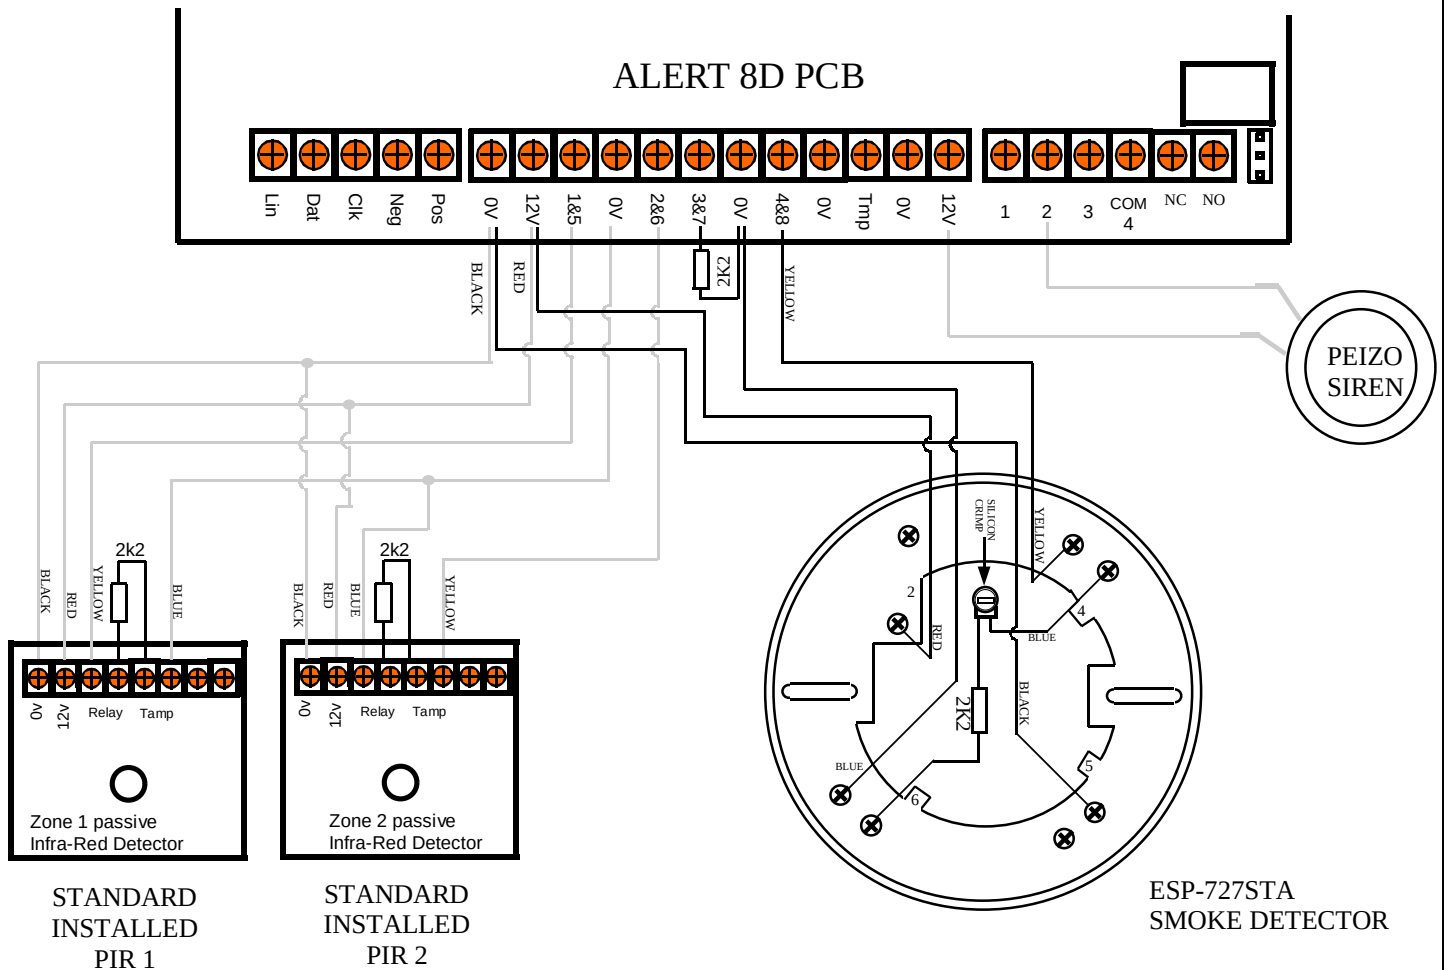


1. Align the long mark on the Smoke Detector with the Small mark on the Base.

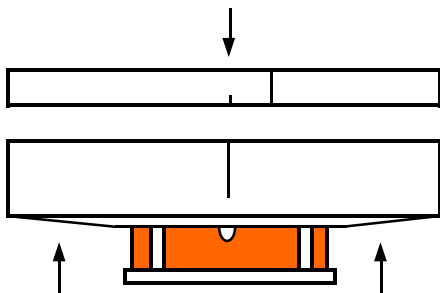

2. Push Smoke Detector onto Base.

3. Turn the Smoke Detector Clockwise, so that the Long mark on the Smoke Detector now Lines up with the Long mark on the Base.

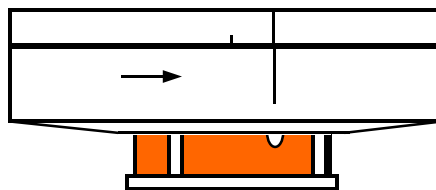

PROGRAMMING:

You now need to tell the control panel that input 4 is a 24 hour fire zone.

To Change the options you **must** first enter PROGRAM MODE.

PRESS <PROGRAM> then your INSTALLER CODE and <ENTER>

PRESS <PROGRAM> 129 <ENTER> (the keypad will then beep, NO zone lights should be lit).

NOW PRESS 4 (zone 4 only will light up) PRESS <ENTER>

Exit Program Mode PRESS <PROGRAM> then <ENTER>

TESTING:

1. Take the Can of Smoke Test and shake well.


2. Hold the can between **0.6 & 1.2 Meters** below the smoke detector and spray for 2 to 3 seconds.

3. Wait 5 seconds, a fire alarm activation should occur. (a fire alarm activation is different to a normal activation as only the internal siren will go and it pulses on & off every 2 seconds).

4. When the alarm goes off, the keypad will be flashing up zone 4. Type in a User Code to cancel the alarm.

5. If the alarm does not activate retry from step one.

ADDING 2 SMOKE DETECTORS TO AN A8D-PP KIT

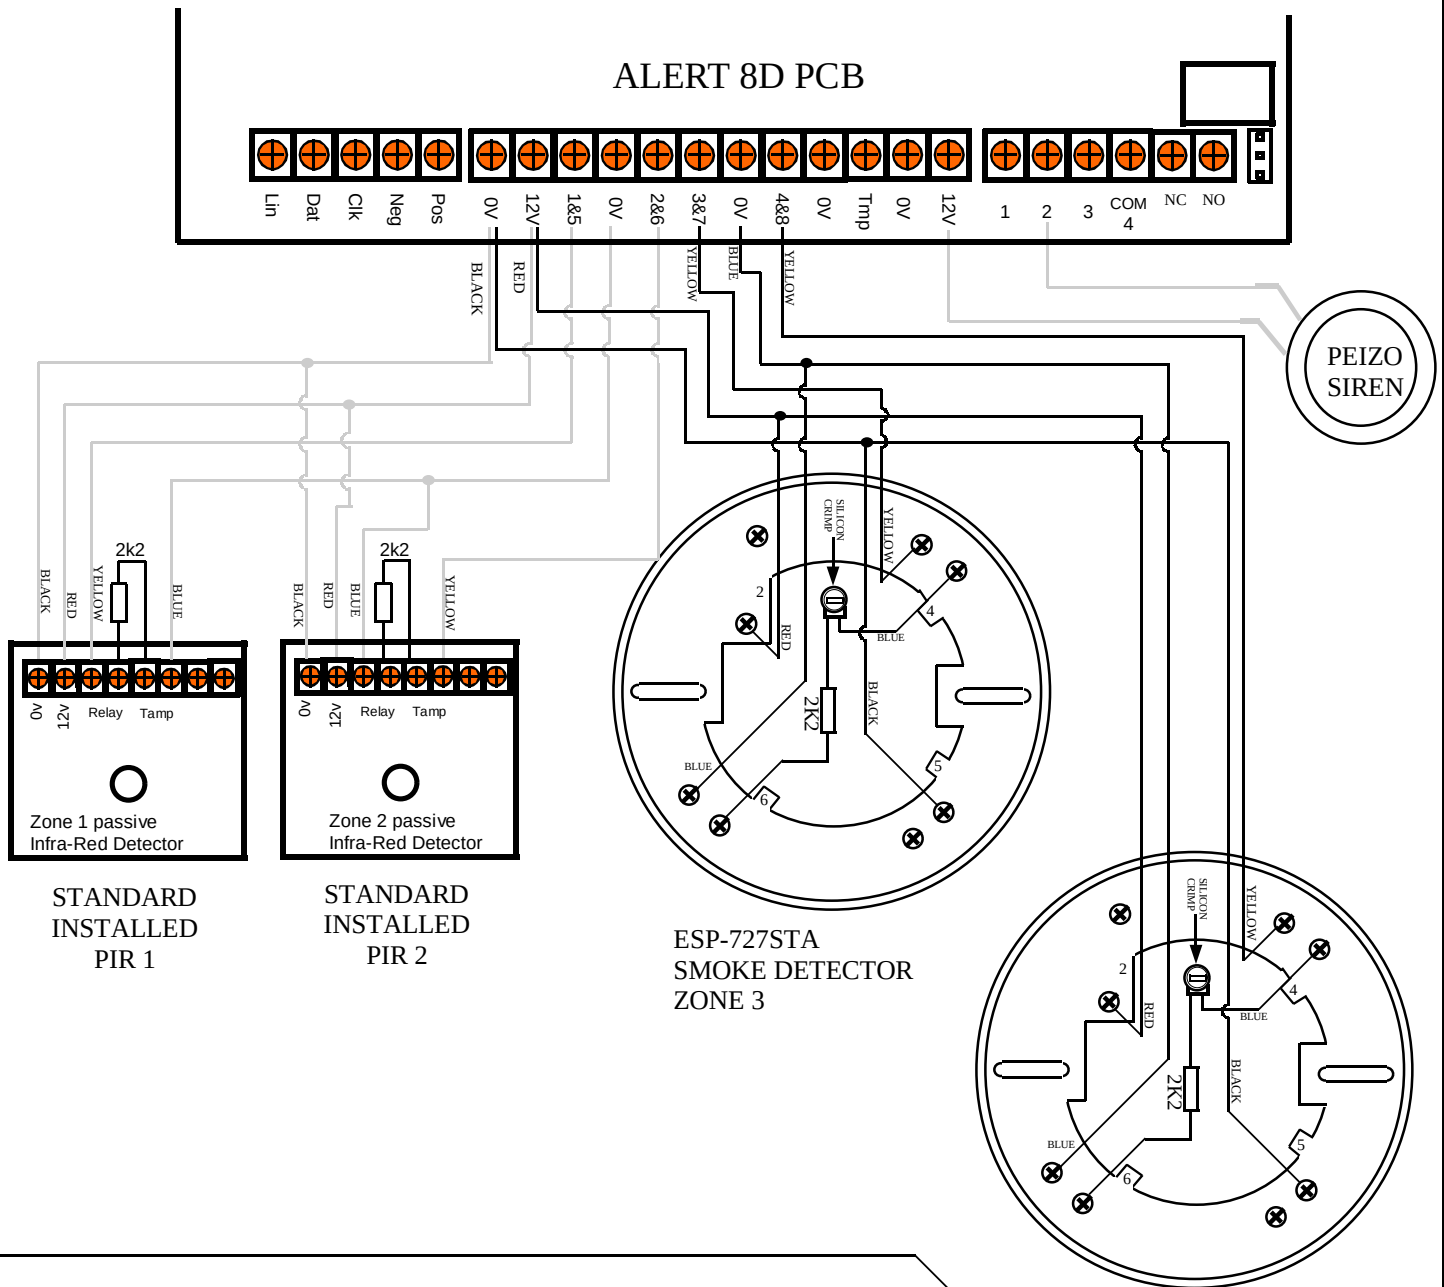

PROGRAMMING:

You now need to tell the control panel that input 3 & 4 are 24 hour fire zone.

To Change the options you **must** first enter PROGRAM MODE.

PRESS <**PROGRAM**> then your INSTALLER CODE and <**ENTER**>

PRESS <**PROGRAM**> 129 <**ENTER**> (the keypad will then beep, NO zone lights should be lit).

NOW PRESS 3 then 4 (zones 3 & 4 only will light up) PRESS <**ENTER**>

Exit Program Mode PRESS <**PROGRAM**> then <**ENTER**>

TESTING:

1. Take the Can of Smoke Test and shake well.
2. Stand under zone 3 Smoke, hold the can between **0.6 & 1.2 Meters** below the smoke detector and spray for 2 to 3 seconds.
3. Wait 5 seconds, a fire alarm activation should occur. (a fire alarm activation is different to a normal activation as only the internal siren will go and it pulses on & off every 2 seconds).
4. When the alarm goes off, the keypad will be flashing up zone 3. Type in a User Code to cancel the alarm.
5. If the alarm does not activate retry from step One.
6. Now Stand under zone 4 Smoke, hold the can between **0.6 & 1.2 Meters** below the smoke detector and spray for 2 to 3 seconds.
7. Wait 5 seconds, once again a fire alarm activation should occur.
8. When the alarm goes off, the keypad will be flashing up zone 4. Type in a User Code to cancel the alarm.
9. If the alarm does not activate retry from step Six.