


ADDING 1 EXTRA SWAN SENSOR TO A PW8-LITEPP KIT

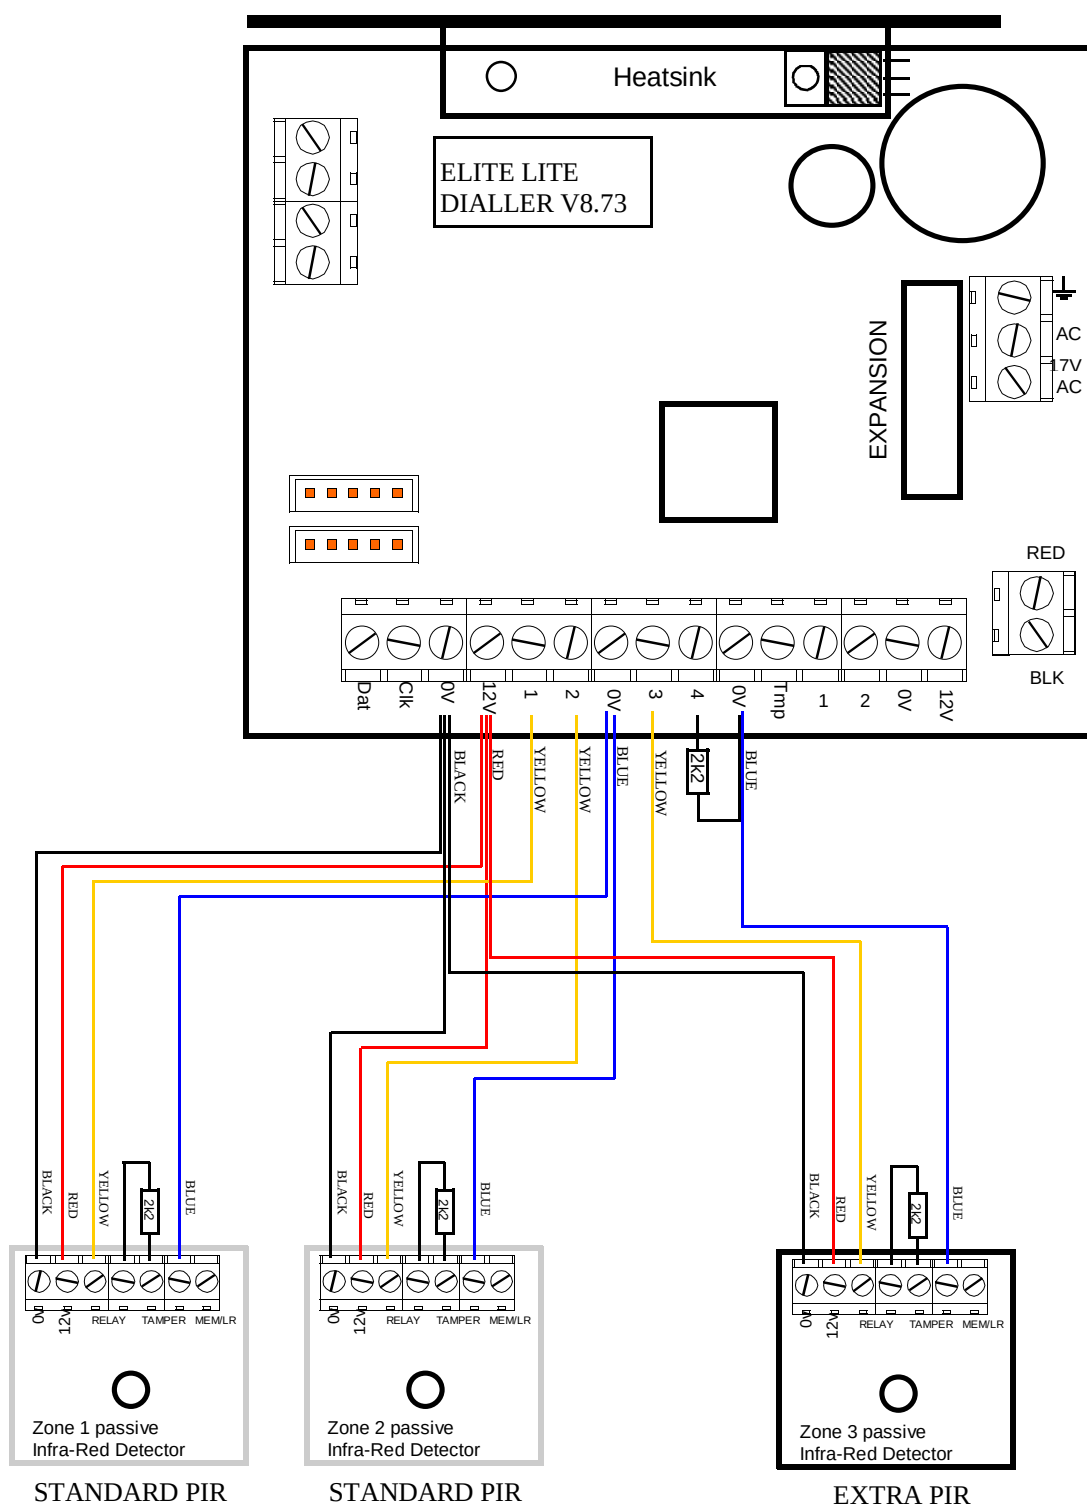


Changing Entry delay - Zone 3 has NO entry delay time as Default.

This is how long the panel gives you to get in and disarm it after a sensor has been tripped. Each sensor has its own delay from 0 to 255 seconds. If you have to pass a sensor to get to the keypad then it should have a delay. You must be in program mode to change.

To change:

Sensor 3 delay time press **<PROGRAM> 303 <ENTER>** followed by the new time [][][] and **<ENTER>** to confirm, the new time will flash back. (default time is set to 0 seconds)

ADDING 2 EXTRA SWAN SENSORS TO A PW8-LITEPP KIT

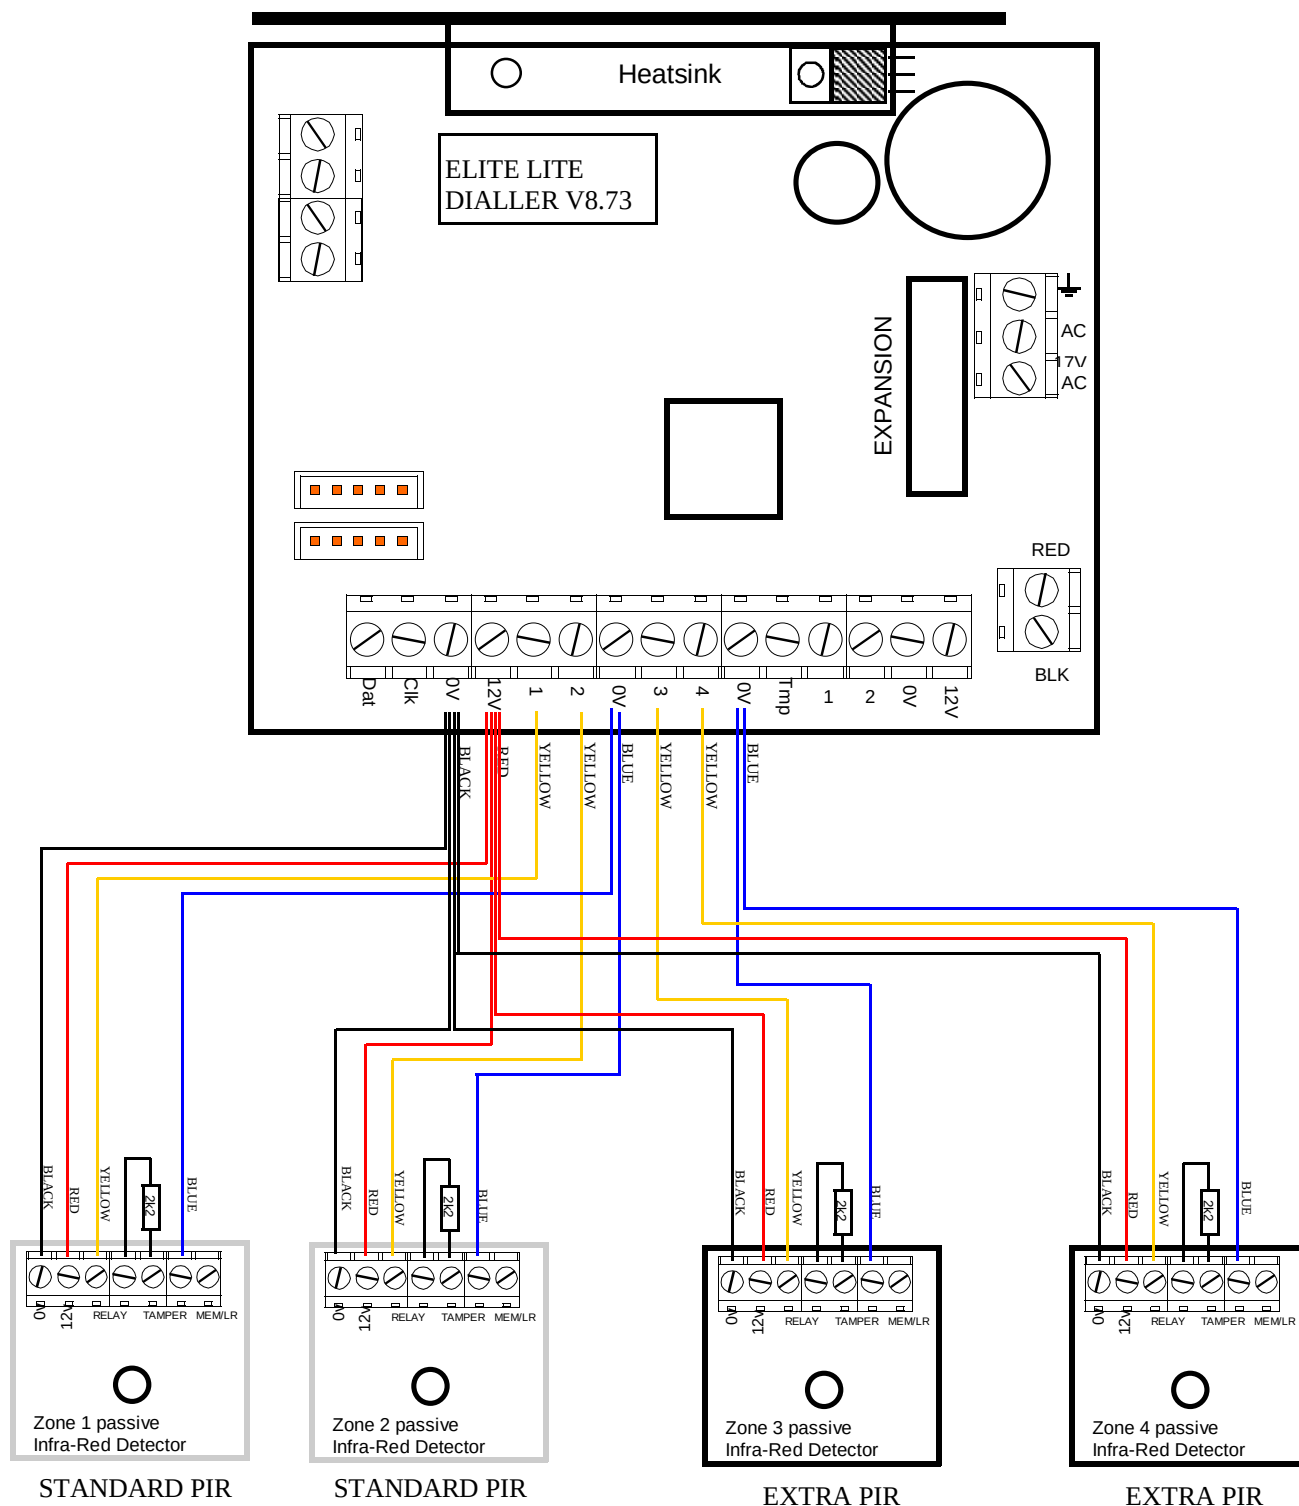

Changing Entry delay - Zone 3 and 4 both have NO entry delay time as Default.

This is how long the panel gives you to get in and disarm it after a sensor has been tripped.


Each sensor has its own delay from 0 to 255 seconds. If you have to pass a sensor to get to the keypad then it should have a delay. You must be in program mode to change.

To change:


Sensor 3 delay time press **<PROGRAM> 303 <ENTER>** followed by the new time [][][] and **<ENTER>** to confirm, the new time will flash back. (default time is set to 0 seconds)

Sensor 4 delay time press **<PROGRAM> 304 <ENTER>** followed by the new time [][][] and **<ENTER>** to confirm, the new time will flash back. (default time is set to 0 seconds)

ADDING 1 SMOKE DETECTOR TO A PW8LITE-PP KIT

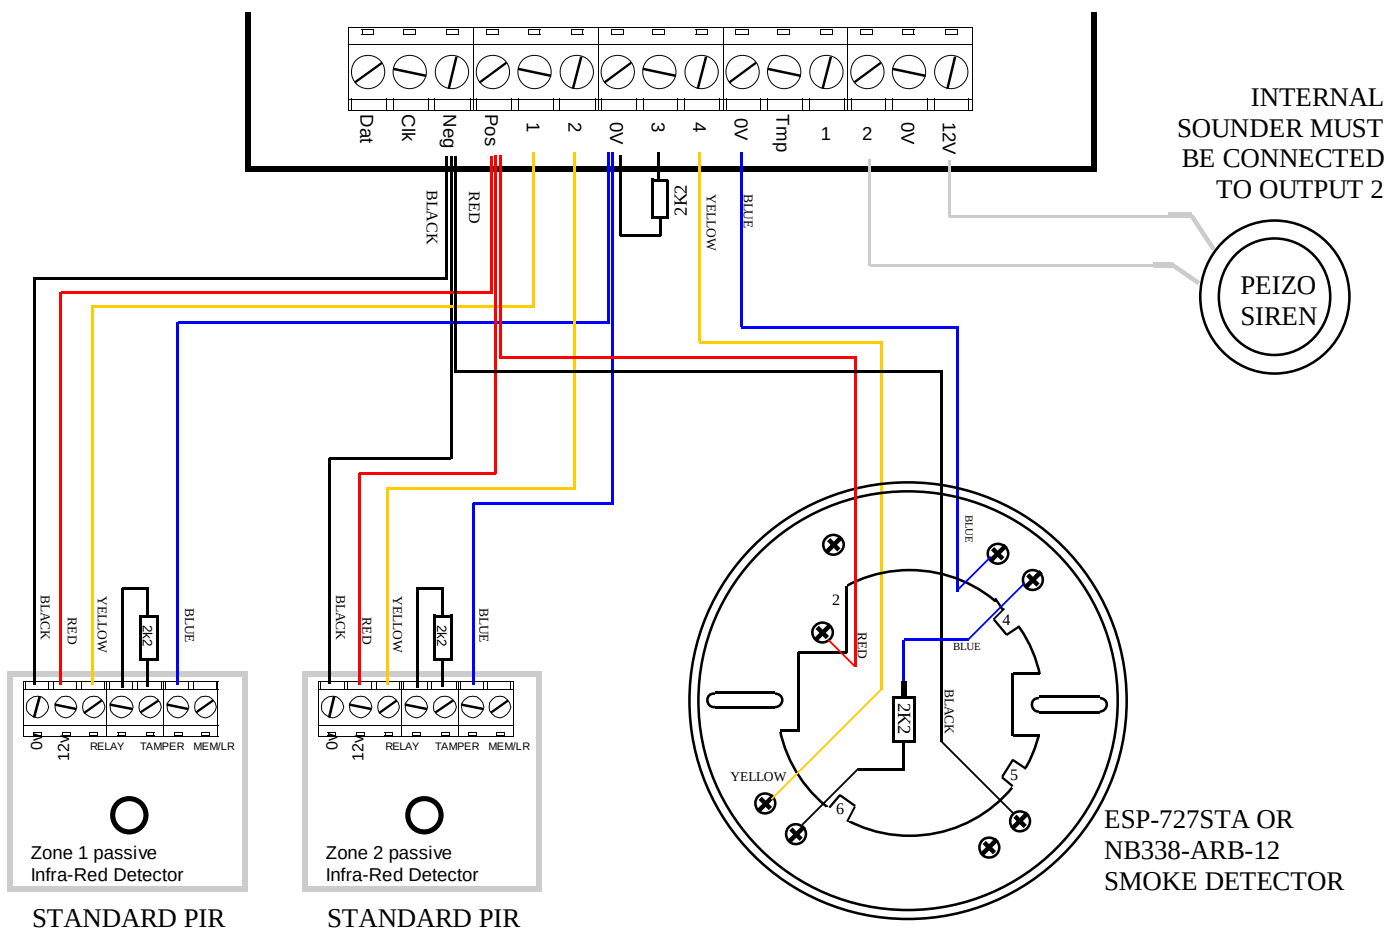


1. Align the long mark on the Smoke Detector with the Small mark on the Base.

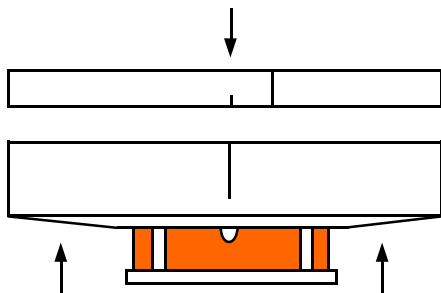

2. Push Smoke Detector onto Base.

3. Turn the Smoke Detector Clockwise, so that the Long mark on the Smoke Detector now Lines up with the Long mark on the Base.

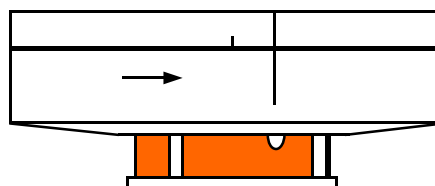

PROGRAMMING:

You now need to tell the control panel that input 4 is a 24 hour fire zone.

To Change the options you **must** first enter PROGRAM MODE.

PRESS **<PROGRAM>** then your INSTALLER CODE and **<ENTER>**

PRESS **<PROGRAM> 129 <ENTER>** (the keypad will then beep, NO zone lights should be lit).

NOW PRESS **4** (zone 4 only will light up) PRESS **<ENTER>**

Exit Program Mode PRESS **<PROGRAM>** then **<ENTER>**

TESTING:

1. Take the Can of Smoke Test and shake well.

2. Hold the can between **0.6 & 1.2 Meters** below the smoke detector and spray for 2 to 3 seconds.

3. Wait 5 seconds, a fire alarm activation should occur. (a fire alarm activation is different to a normal activation as only the internal siren will go and it pulses on & off every 2 seconds).

4. When the alarm goes off, the keypad will be flashing up zone **4**.

5. Type in a User Code to cancel the alarm.

6. If the alarm does not activate retry from step one.

ADDING 2+ SMOKE DETECTOR TO A PW8LITE-PP KIT

INTERNAL
SOUNDER MUST
BE CONNECTED
TO OUTPUT 2

PEIZO
SIREN

